

 
ASSEMBLY INSTRUCTIONS



Office Boffins



A-1 PC




Gas piston

B-5 PCS



Castors

 C-3 PCS
(M8×55mm)



Screw

D-10 PCS
(M6×40mm)



Screw

E-3 PCS
(M8×22×2mm)



washer

F-10 PCS
(M6×1.5×1.5mm)



washer

G-1 PC



Seat

H-2 PCS



Arms

I-1 PC



Base

J-1 PC



Back

K-1 PC



Allen key

M-1 PC



Mechanism

N-1 PC



Headrest

P-2 PCS
(M4×25mm)



PRE-INSERTED

Q-1 PC




Screw driver

EXPM001


PLEASE NOTE:

The screws "P" are pre-inserted into their correct holes to prevent them from being lost in transit. Please remove them before assembly using the allen key provided.

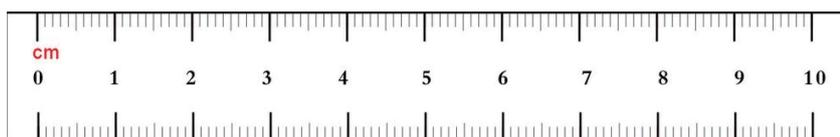


**Do not tighten bolts fully until you have completed assembly.
DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS.
TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.**


1

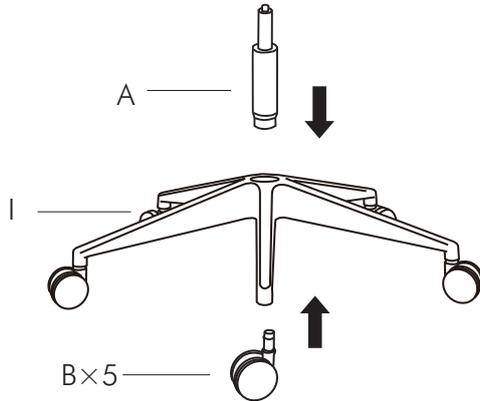


2

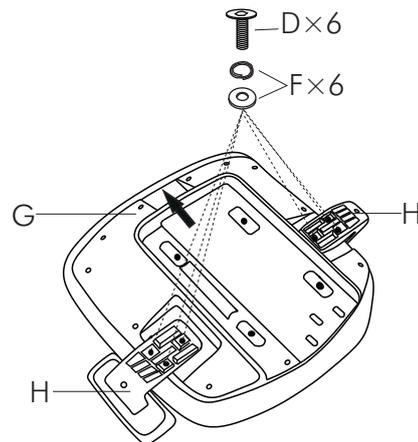


3

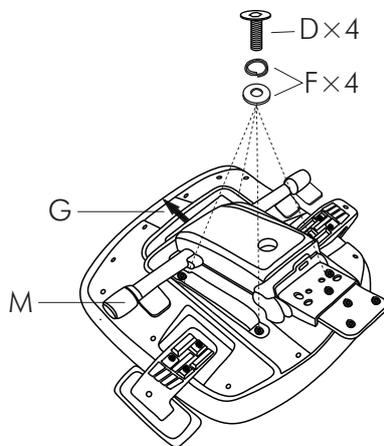


4

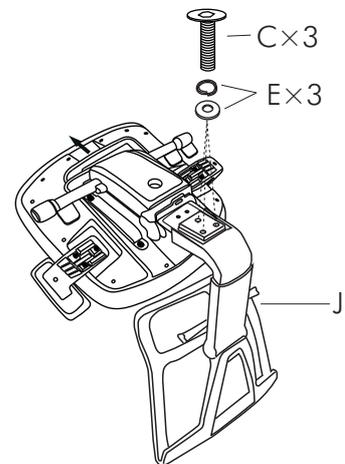

5

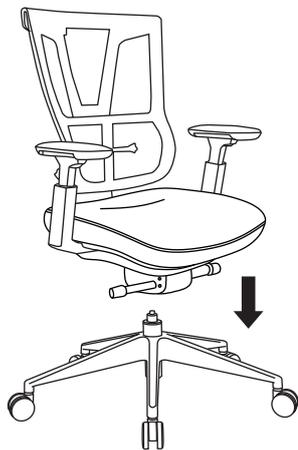

6

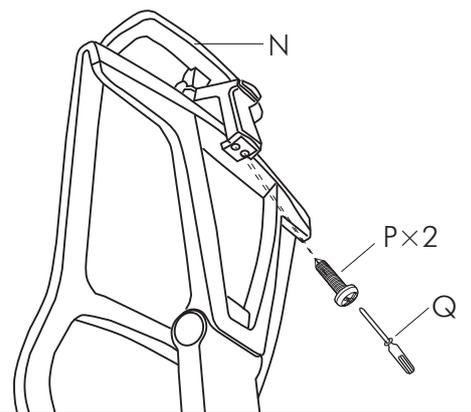


7



WARNING

- DO NOT STAND ON THIS CHAIR.
- DO NOT USE THIS CHAIR AS A STEP LADDER.
- USE THIS PRODUCT FOR SEATING ONE PERSON AT A TIME ONLY.
- DO NOT USE THIS CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE FIRMLY SECURED.
- AT LEAST EVERY 6 MONTHS, CHECK ALL BOLTS, SCREWS AND KNOBS TO BE SURE THEY ARE TIGHT.
- IF PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USING THIS PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORISED PARTS.
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

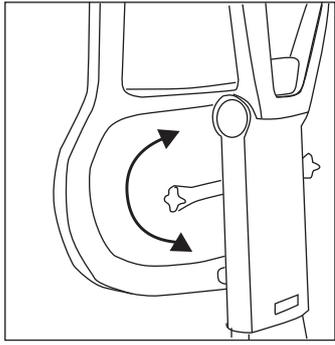

Rotate the handle backwards to unlock the split back adjustment and rotate forward to lock into preferred position.

