 


A



5 PCS

B



7 PCS

C



7 PCS

D



7 PCS

E



2 PCS

F



2 PCS

G



1 PC

H









1 PC





Do not tighten bolts fully until you have completed assembly.
Please note the fixing screws are located in their fixing points if not found in the parts bag.

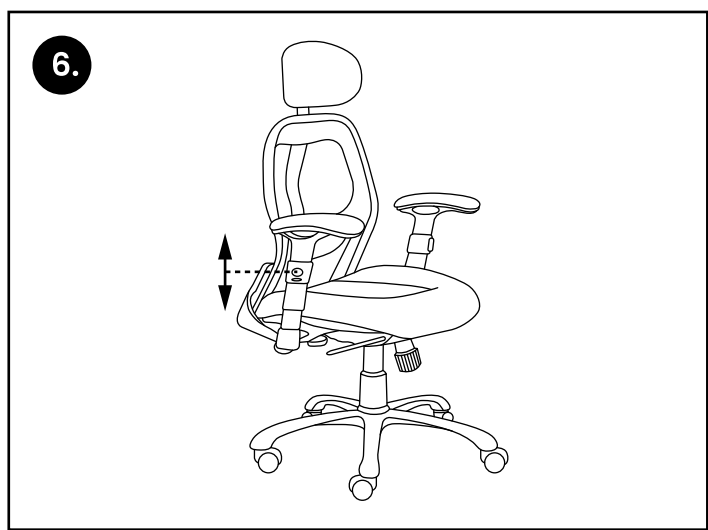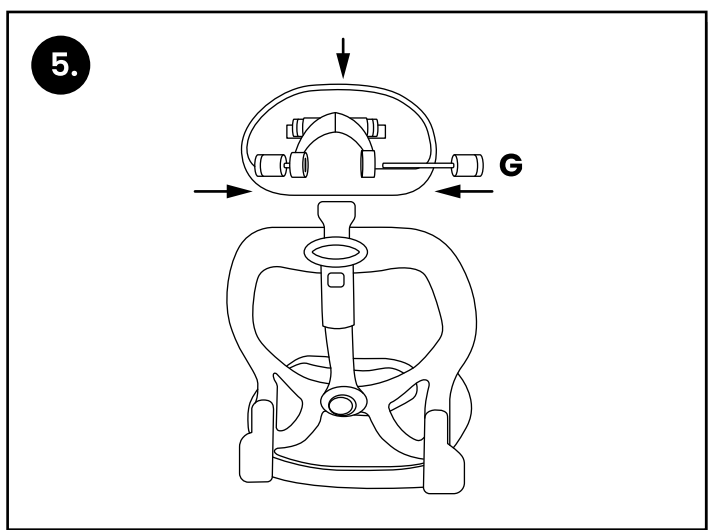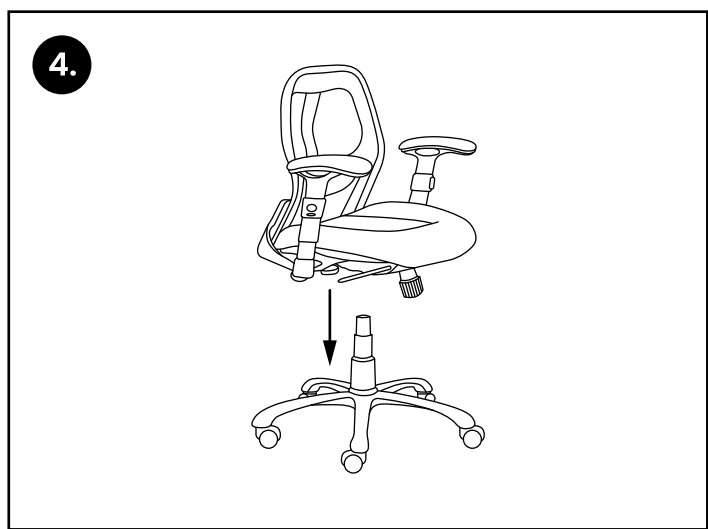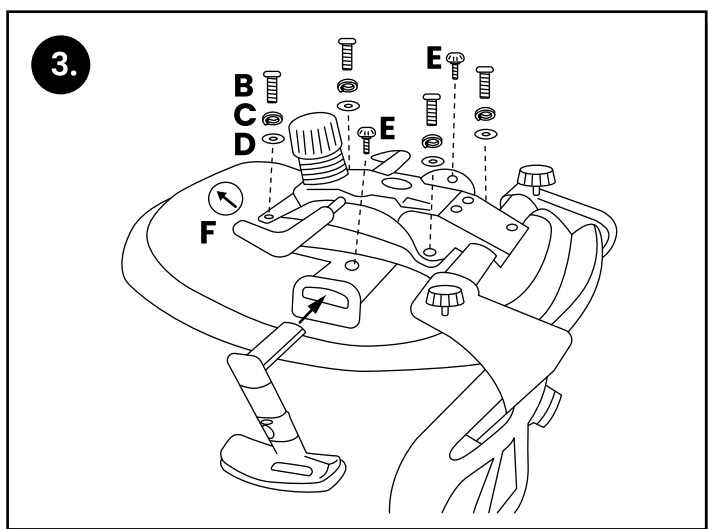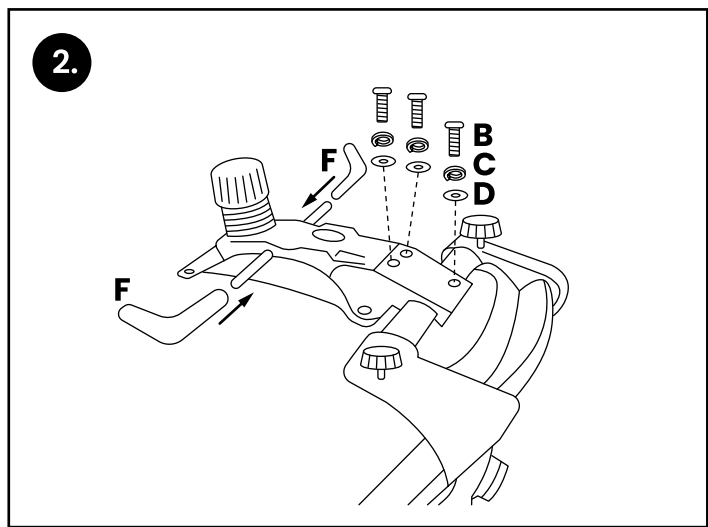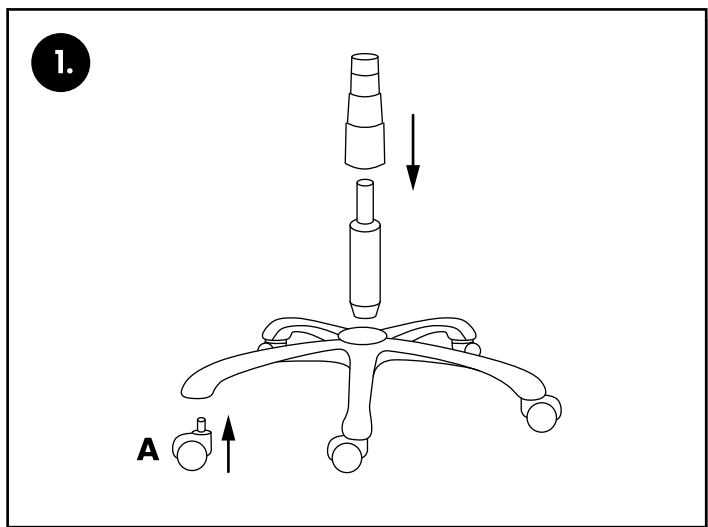

WARNING

- Do not stand on this chair. Do not use this chair as a step ladder
- Use this product only for seating one person at a time
- Do not use this chair unless all bolts, screws and knobs are firmly secured
- At least every 4 months check all bolts, screws and knobs to be sure they are tight
- If parts are missing, broken, damaged or worn, stop use of this product until repairs are made using factory authorised parts
- Failure to follow these warnings could result in serious injury

