


ASSEMBLY INSTRUCTIONS

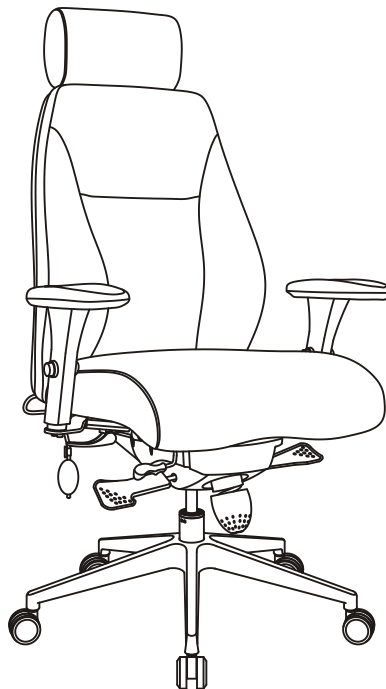

 
Office Boffins



A-1 PC



B-1 PC




C-5 PCS



D-1 PC



 E-2 PCS



F-1 PC



G-4 PCS



 
20mm

G1-4 PCS



Ø14mm

H-3 PCS



20mm

H1-3 PCS



Ø16mm

H2-3 PCS




Ø23mm


K-1 PC



PTASKF001-FK / PTASKL001-LK

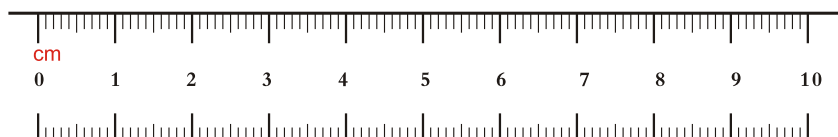


**Do not tighten bolts fully until you have completed assembly.
DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS.
TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.**

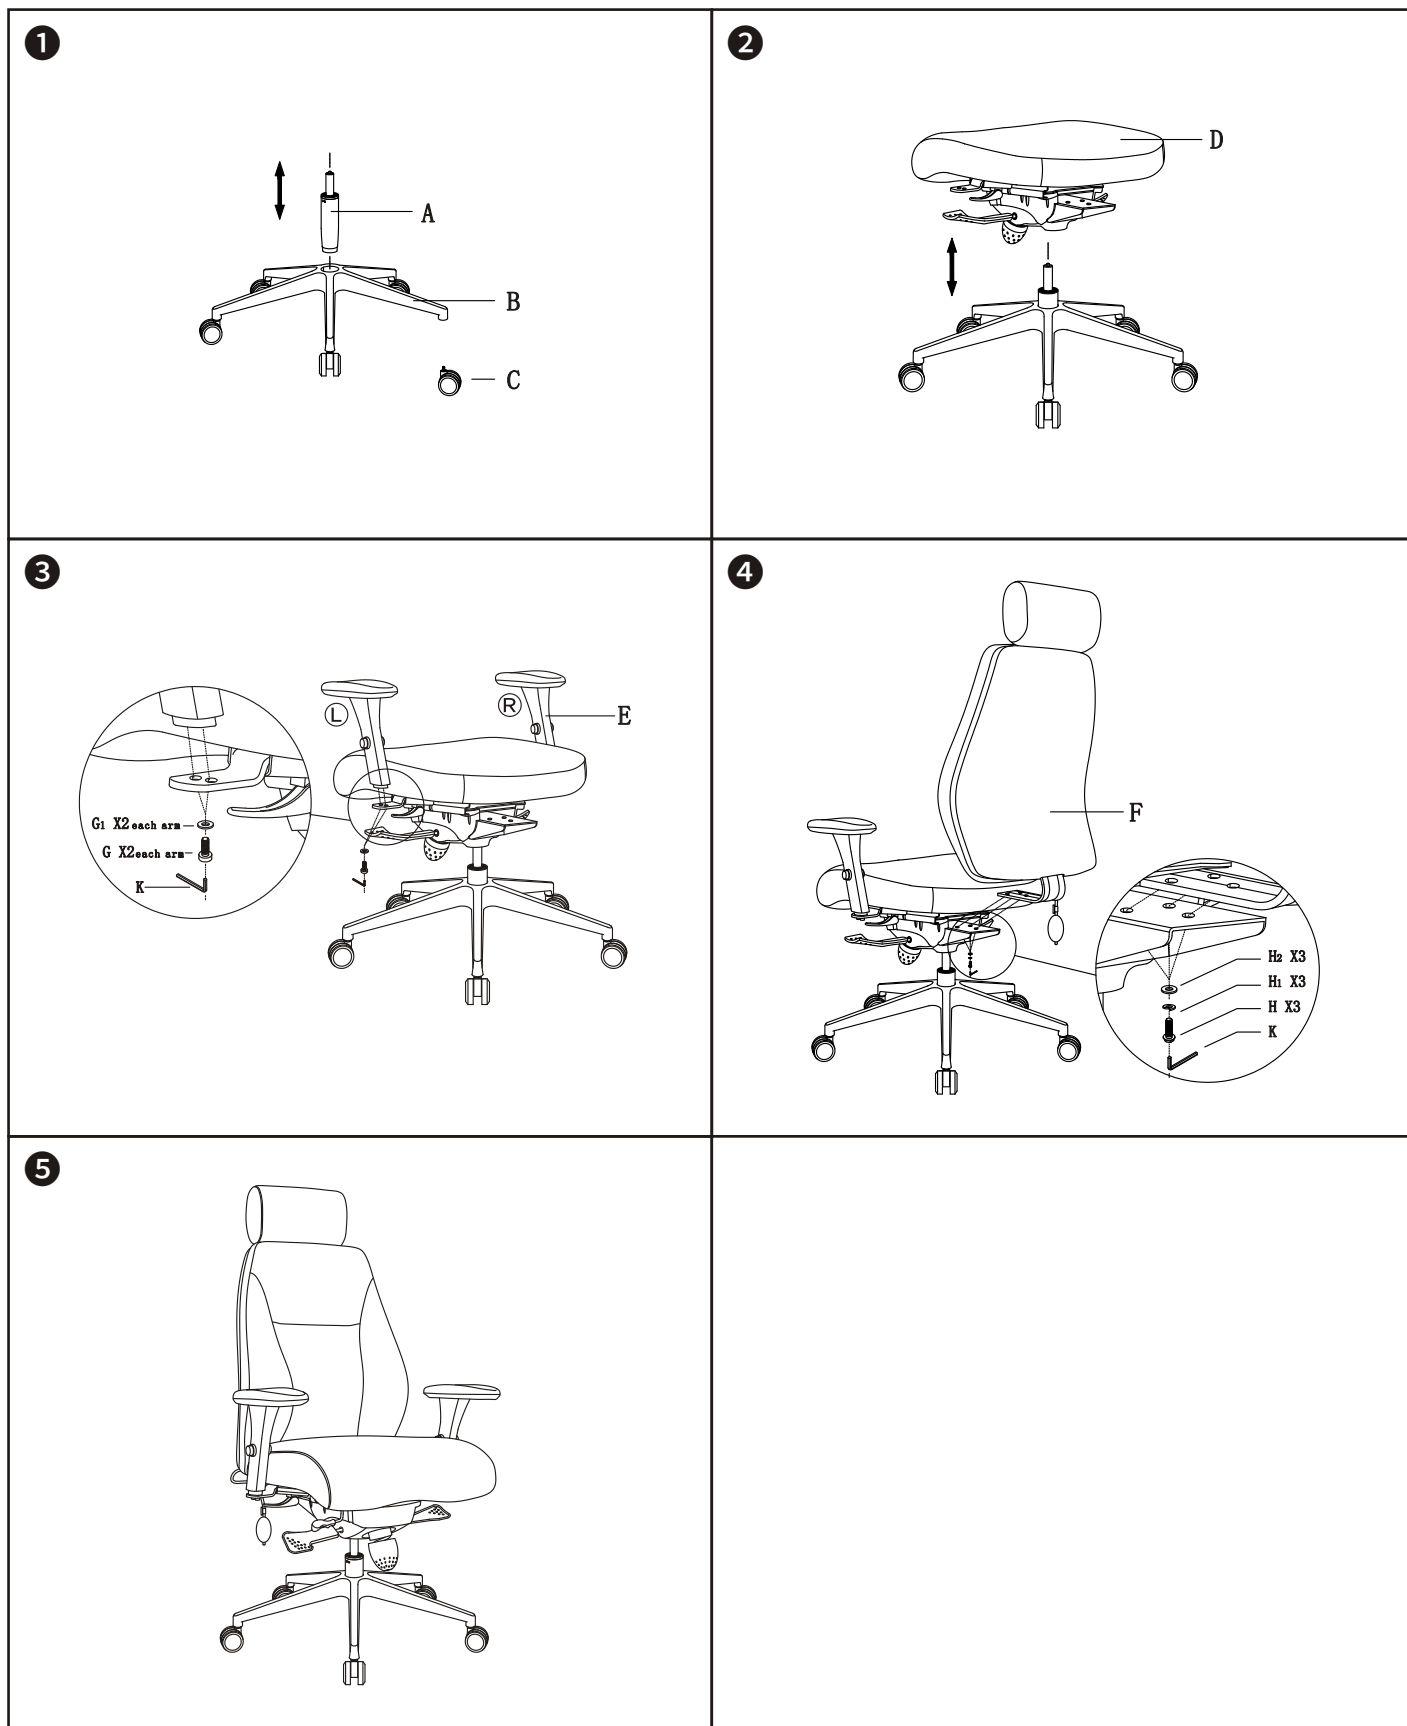


WARNING


- DO NOT STAND ON THIS CHAIR.
- DO NOT USE THIS CHAIR AS A STEP LADDER.
- USE THIS PRODUCT FOR SEATING ONE PERSON AT A TIME ONLY.
- DO NOT USE THIS CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE FIRMLY SECURED.
- AT LEAST EVERY 6 MONTHS, CHECK ALL BOLTS, SCREWS AND KNOBS TO BE SURE THEY ARE TIGHT.
- IF PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USING THIS PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORISED PARTS.
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

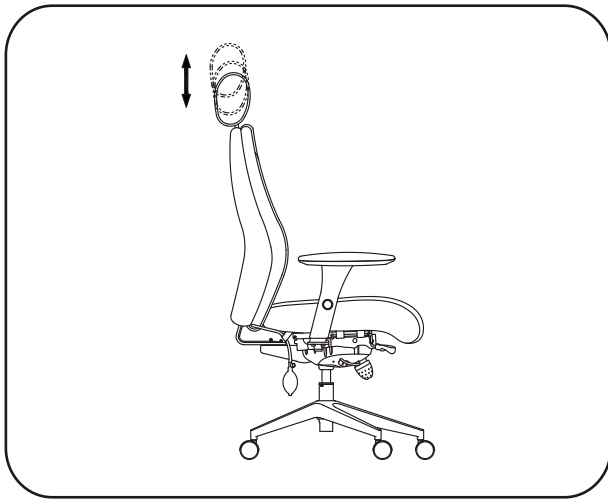


Height Adjustable Headrest.

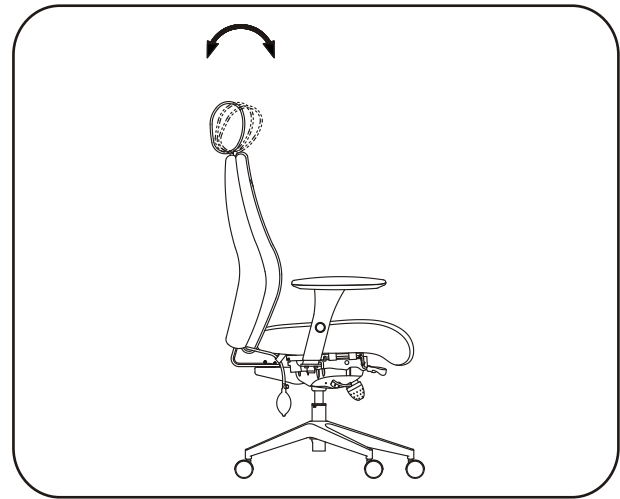


45° Adjustment.

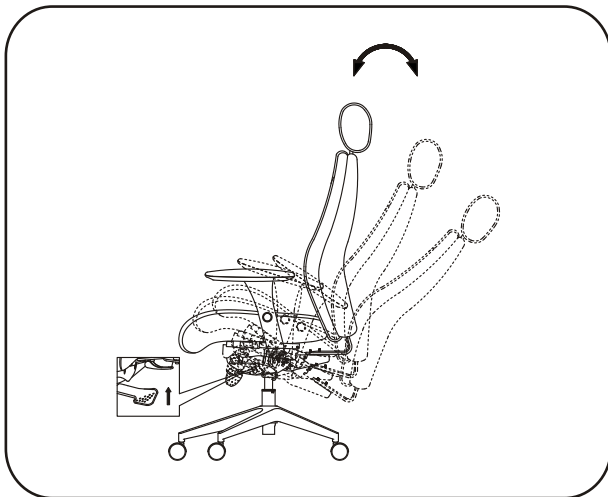


Synchronised Tilt Adjustment, push handle down to release tilt, lift handle up to lock in 5 positions.

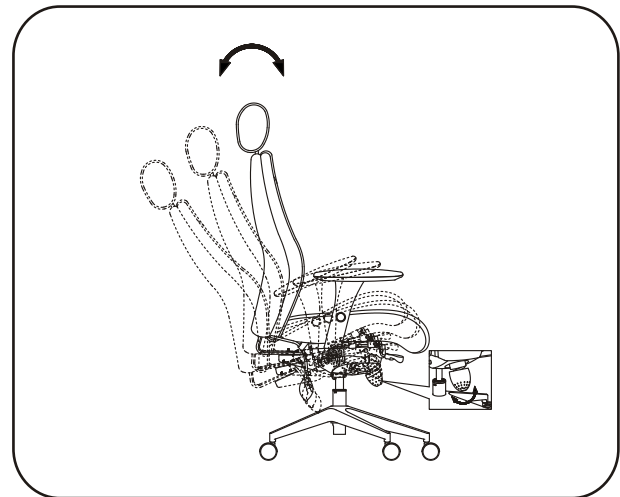

Weight Tension Adjustment, turn clockwise to increase resistance, anti-clockwise to decrease.

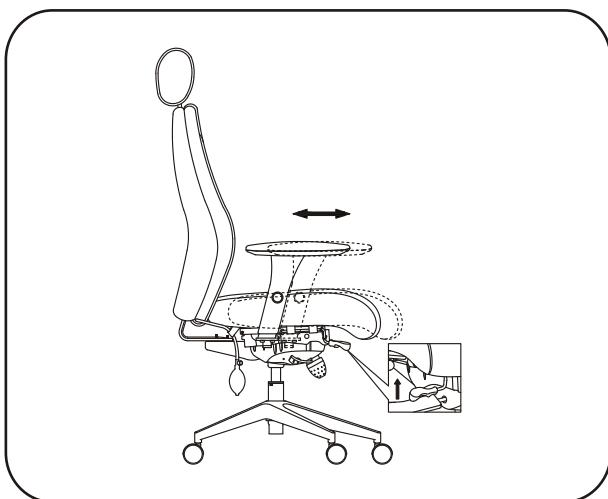

Seat Depth Adjustment, lift handle up to adjust seat depth.

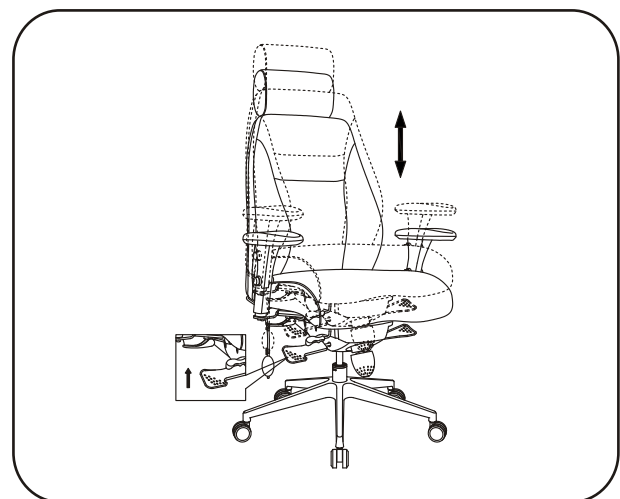


Seat Height Adjustment, lift handle to raise/lower seat height.



Back Height Adjustment, lift back cushion to adjust the back height, it returns to the original height when it lifted to the highest point.
Lumbar Adjustment, squeeze the pump to inflate the lumbar airbag, turn the knob anti-clockwise to release the air to the required level.



Height Adjustable Arms, press the button to adjust the arm height.
Sliding Arm Pads.
Pivoting Arm Pads.

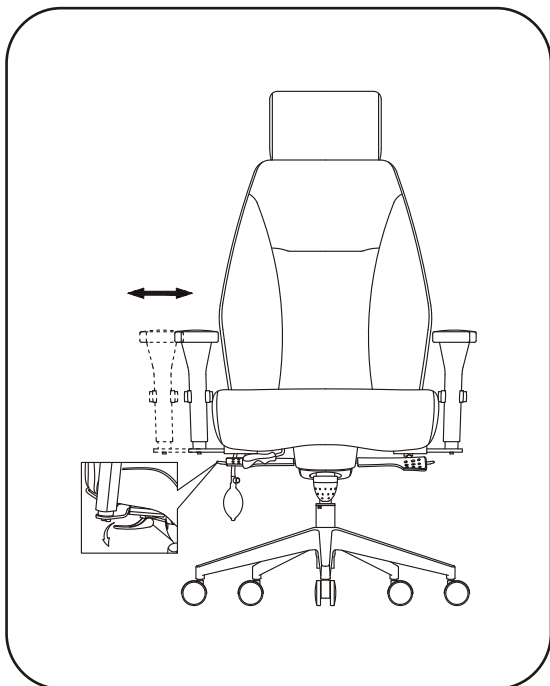

Width Adjustable Arms, push the lever down to release the arms width, pull lever up to lock in position.