 


ASSEMBLY INSTRUCTIONS

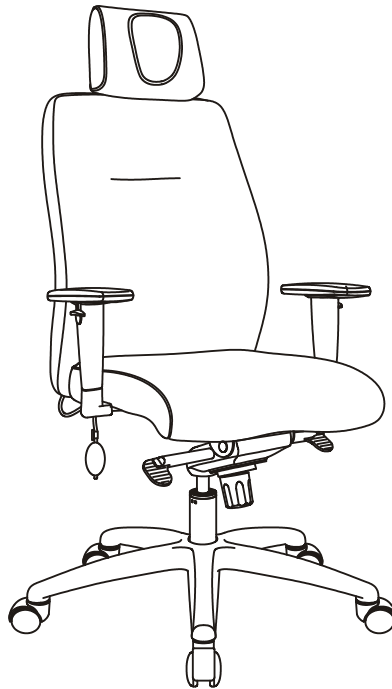

 
Office Boffins



A-1 PC



B-1 PC



C-5 PCS



D-1 PC



E-2 PCS



F-1 PC



G-1 PC



H-6 PCS



 
25mm

H1-2 PCS




40mm

H2-2 PCS



20mm

 H3-3 PCS



20mm

I-3 PCS



Ø16mm

J-3 PCS



 
Ø23mm

K-1 PC




4mm

K1-1 PC




5mm

 ECOF001-K

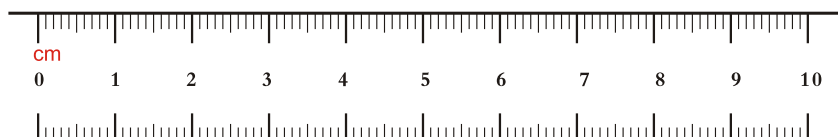


 **Do not tighten bolts fully until you have completed assembly.
DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS.
TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.**

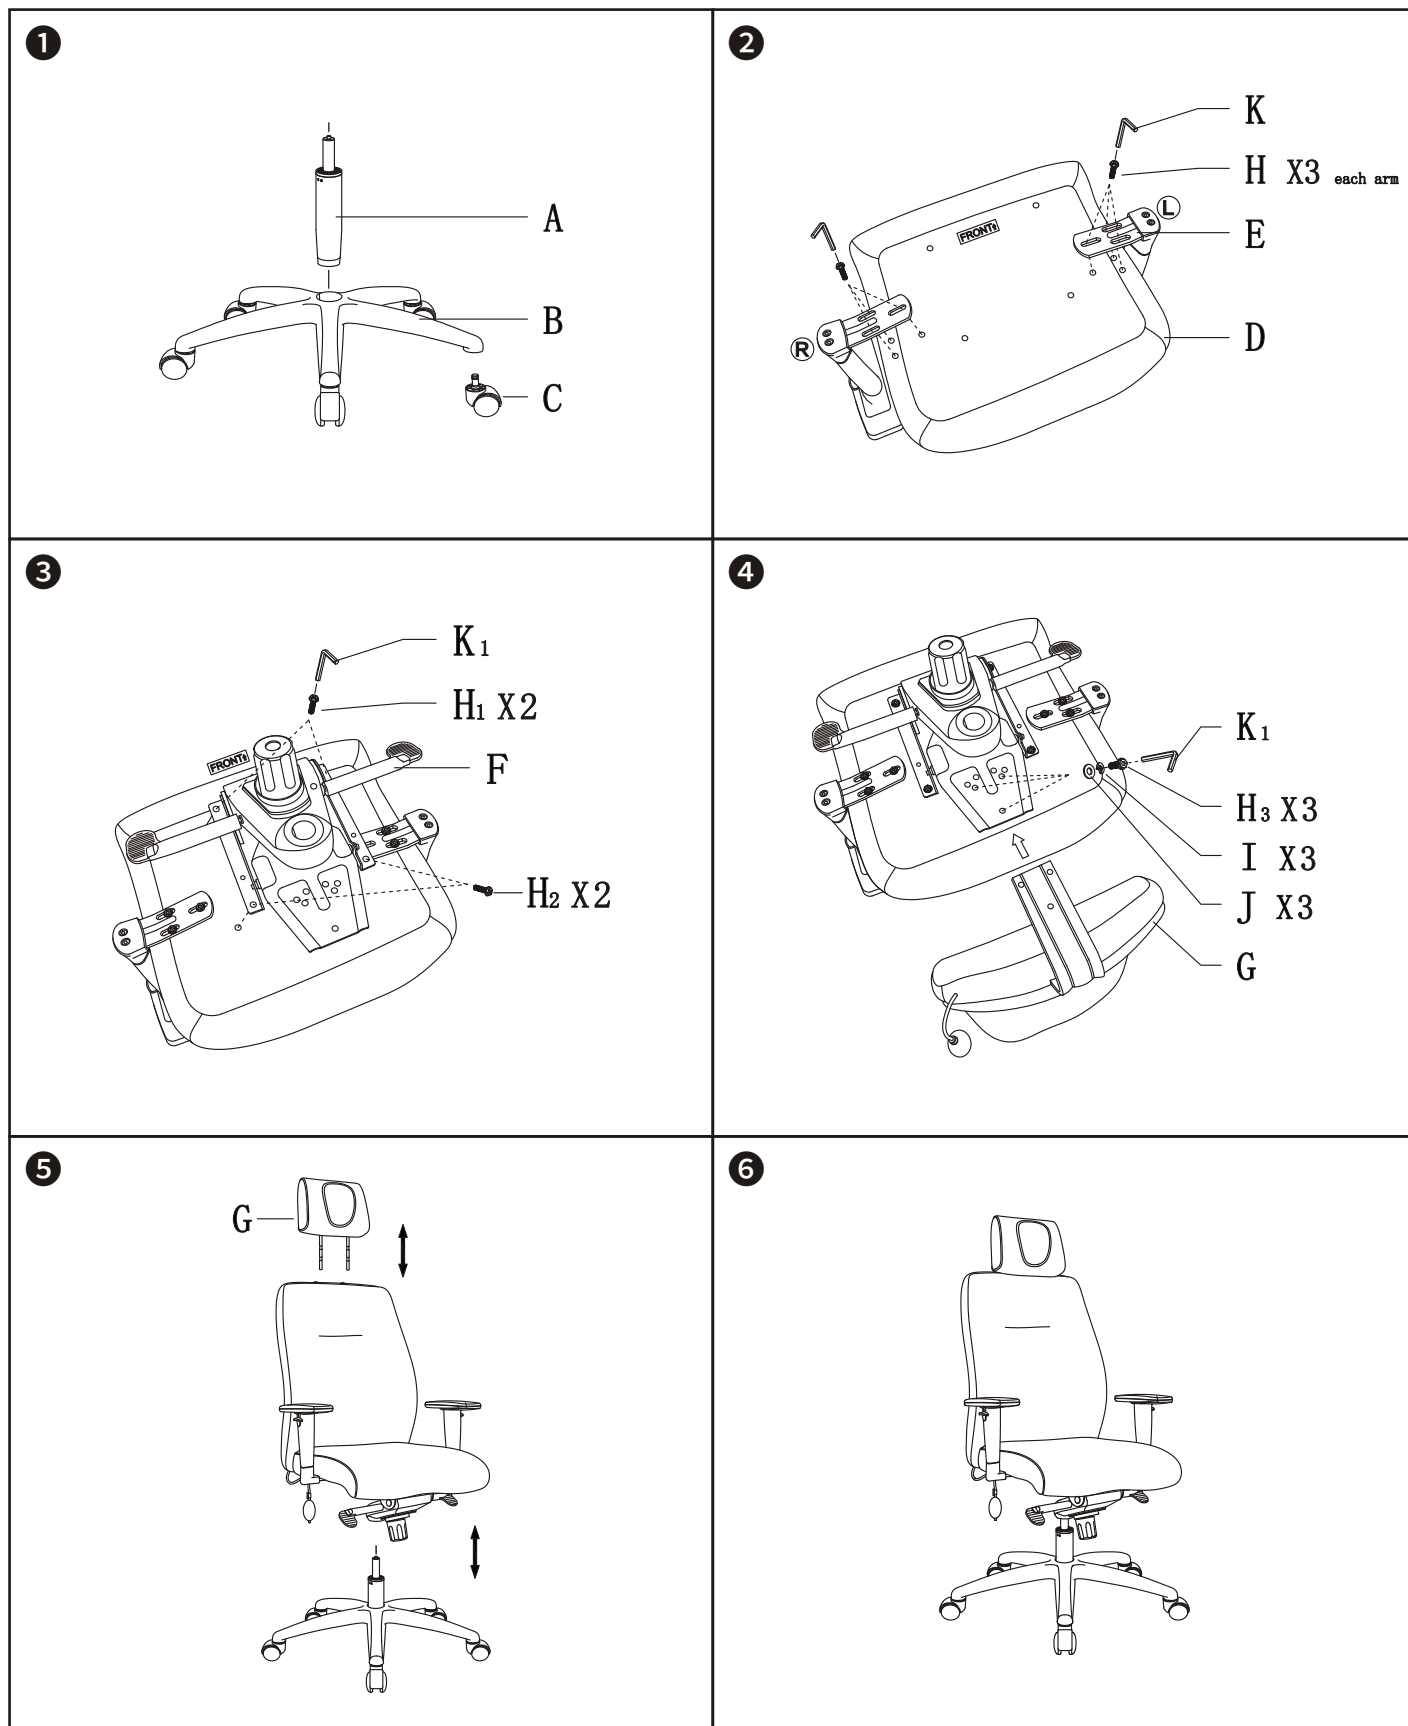


WARNING

 
- DO NOT STAND ON THIS CHAIR.
- DO NOT USE THIS CHAIR AS A STEP LADDER.
- USE THIS PRODUCT FOR SEATING ONE PERSON AT A TIME ONLY.
- DO NOT USE THIS CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE FIRMLY SECURED.
- AT LEAST EVERY 6 MONTHS, CHECK ALL BOLTS, SCREWS AND KNOBS TO BE SURE THEY ARE TIGHT.
- IF PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USING THIS PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORISED PARTS.
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

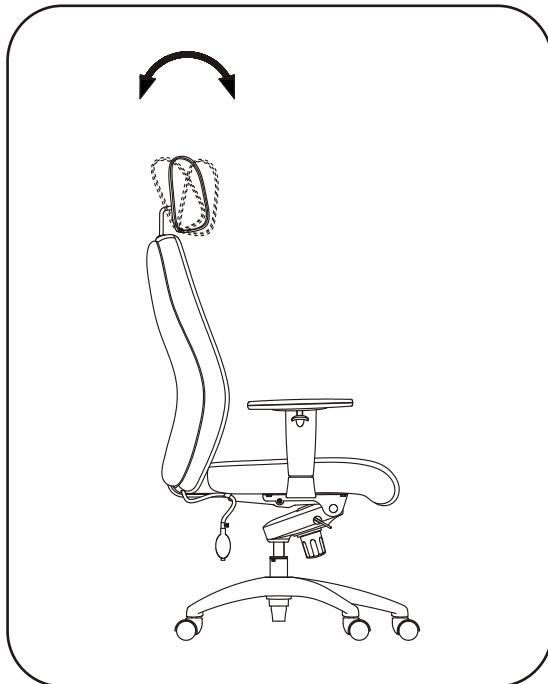


Angle Adjustable Headrest.

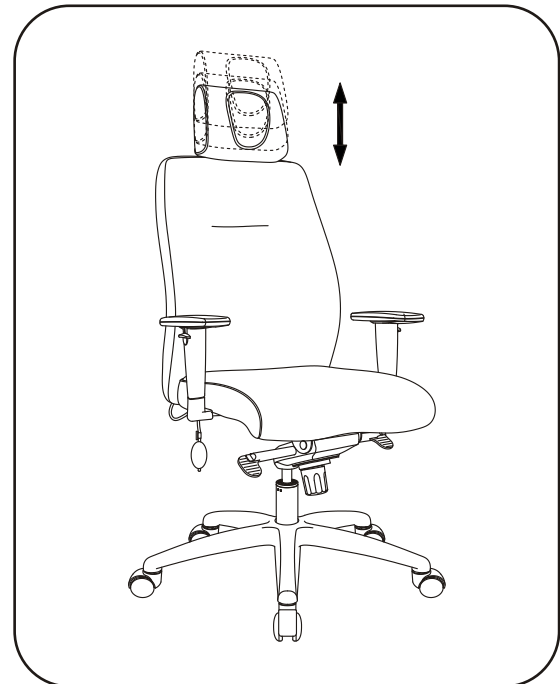 


Height Adjustable Headrest.

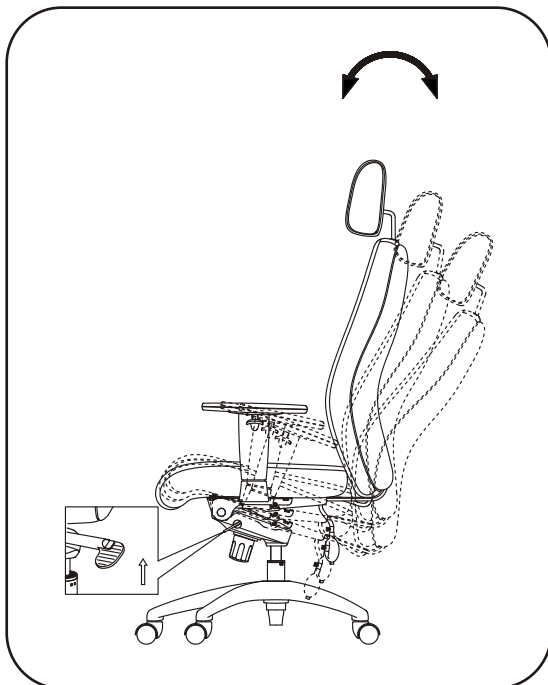 

 
Synchronised Knee Tilt Adjustment, lift handle up to release tilt, push handle down to lock in 5 positions.

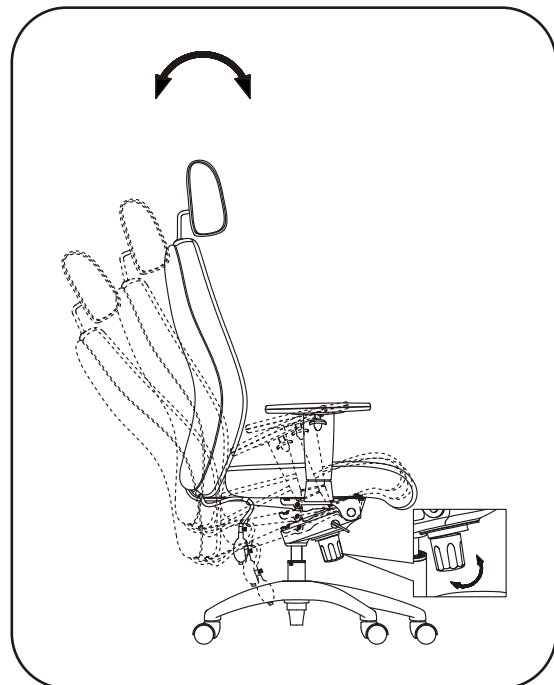

 
Weight Tension Adjustment, turn clockwise to increase resistance, anti-clockwise to decrease.

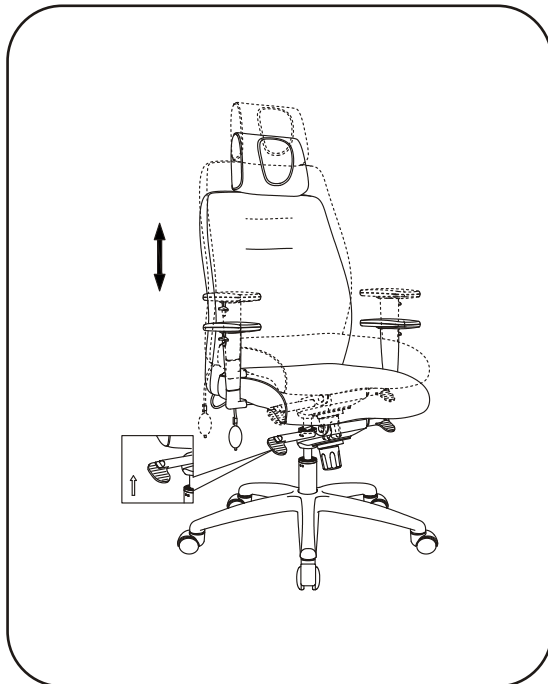

 Seat Height Adjustment, lift handle to raise/lower seat height.

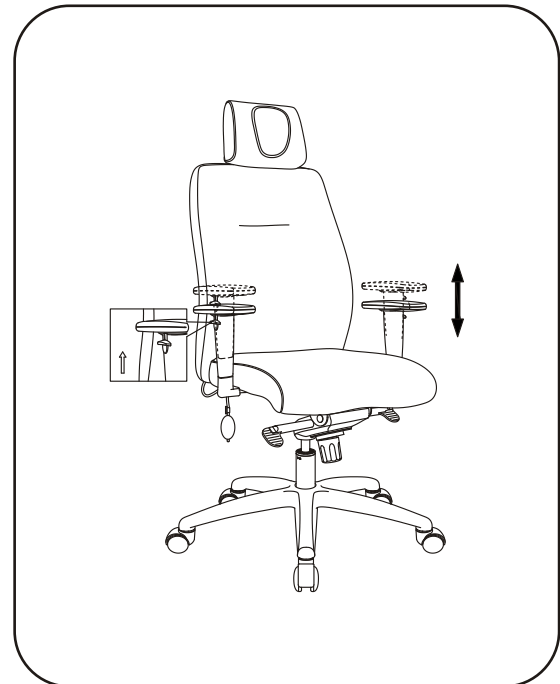

 Height Adjustable Arms, press the button to adjust the arm height.

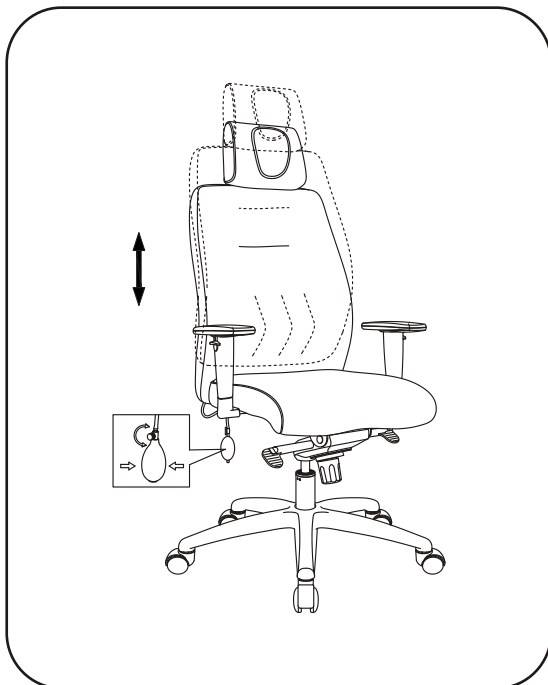

Back Height Adjustment, lift back cushion to adjust the back height, it returns to the original height when it lifted to the highest point.

Lumbar Adjustment, squeeze the pump to inflate the lumbar airbag, turn the knob anti-clockwise to release the air to the required level.