

ASSEMBLY INSTRUCTIONS



Office Boffins



A-1 PC



B-1 PC



 
C-5 PCS




D-1 PC



E-2 PCS



F-1 PC

 

G-1 PC



H-6 PCS



32mm

H1-4 PCS



25mm

H2-4 PCS



20mm

I-4 PCS



Ø16mm

J-4 PCS



Ø23mm

K-1 PC




4mm

K1-1 PC




5mm

PRML001-K

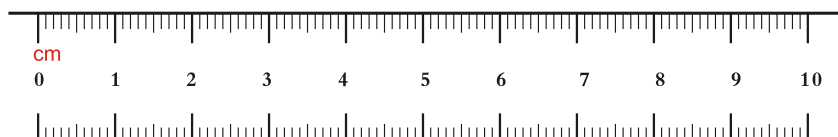


**Do not tighten bolts fully until you have completed assembly.
DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS.
TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.**

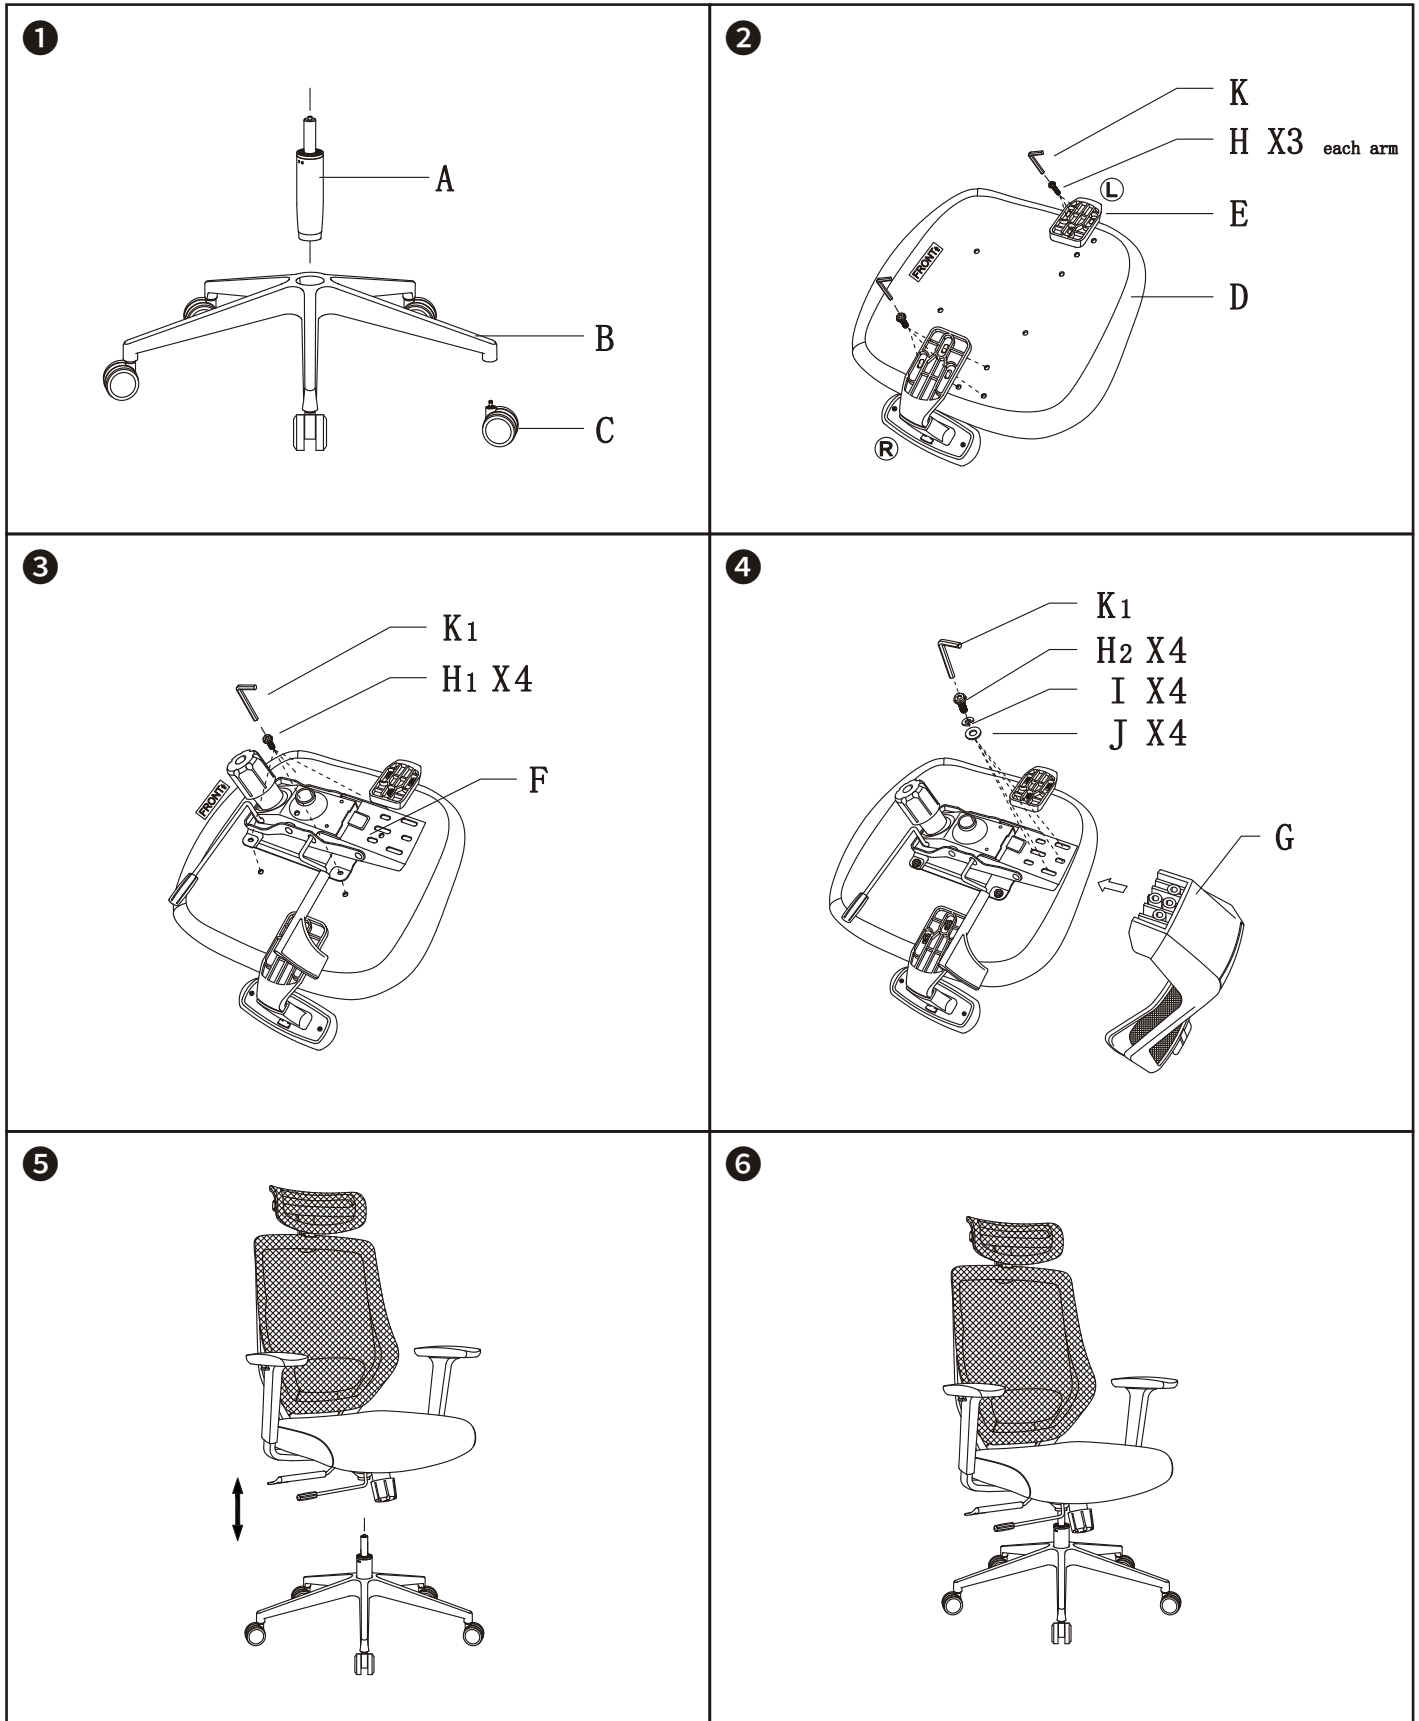


WARNING


- DO NOT STAND ON THIS CHAIR.
- DO NOT USE THIS CHAIR AS A STEP LADDER.
- USE THIS PRODUCT FOR SEATING ONE PERSON AT A TIME ONLY.
- DO NOT USE THIS CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE FIRMLY SECURED.
- AT LEAST EVERY 6 MONTHS, CHECK ALL BOLTS, SCREWS AND KNOBS TO BE SURE THEY ARE TIGHT.
- IF PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USING THIS PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORISED PARTS.
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

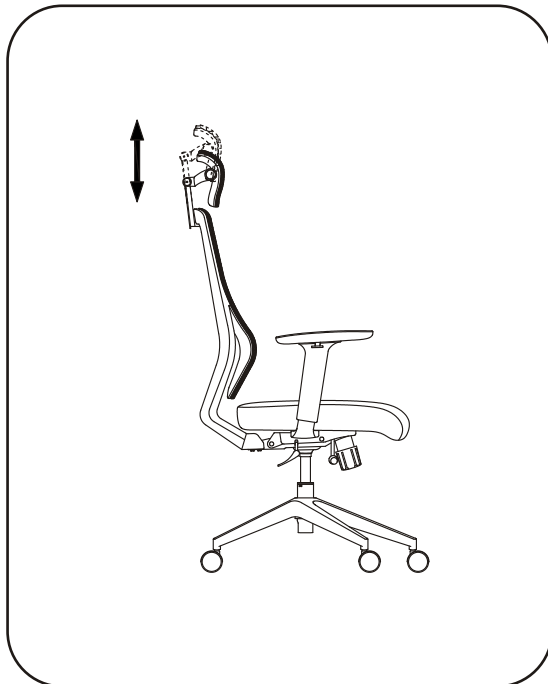


Height Adjustable Headrest.

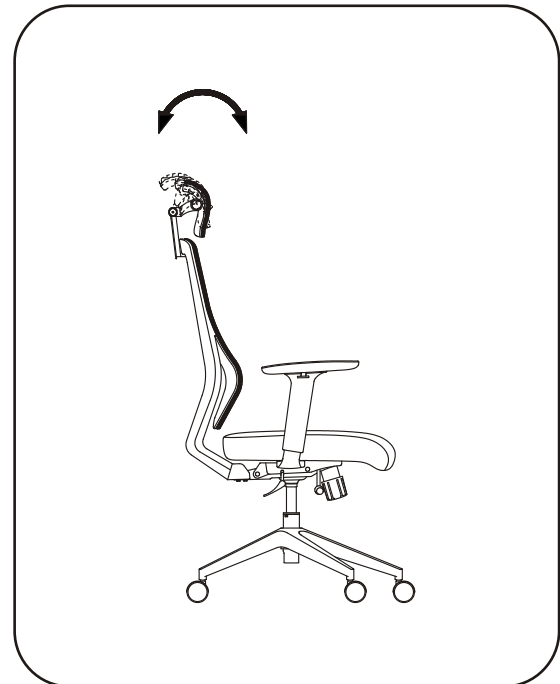


45° Adjustment.

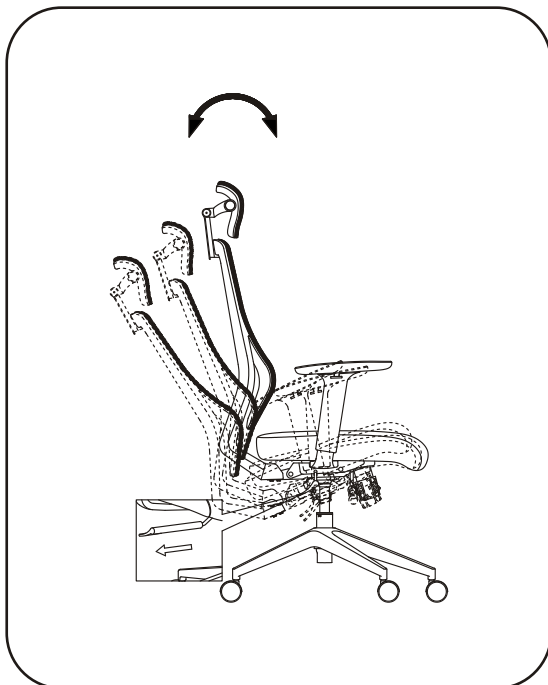

Synchronised Tilt Adjustment, pull the handle out to release the tilt, push the handle in to lock in 3 positions.

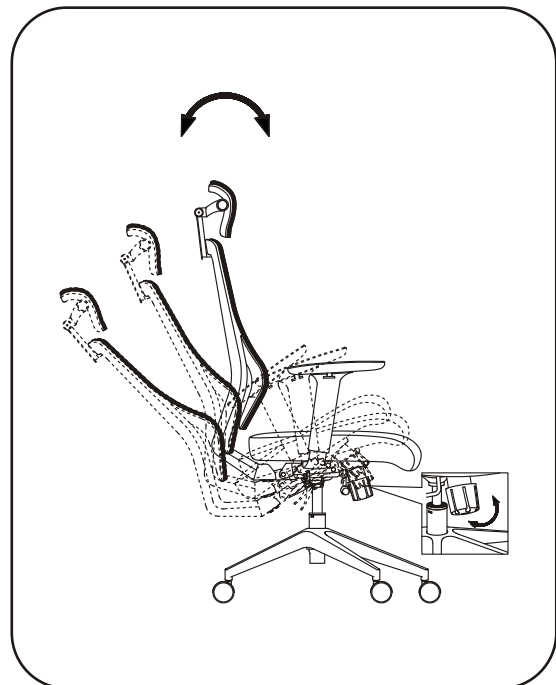


Weight Tension Adjustment, turn clockwise to increase resistance, anti-clockwise to decrease.

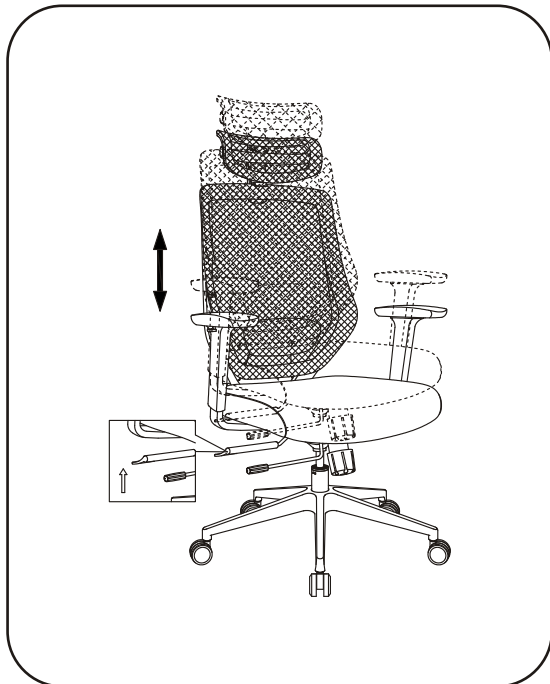


Seat Height Adjustment, lift handle to raise/lower seat height.



Lumbar Support Adjustment.

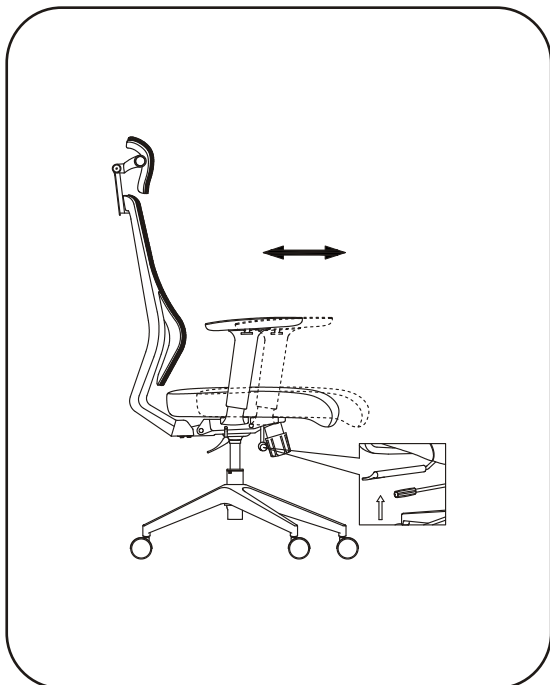

Seat Depth Adjustment, lift handle up to adjust seat depth.

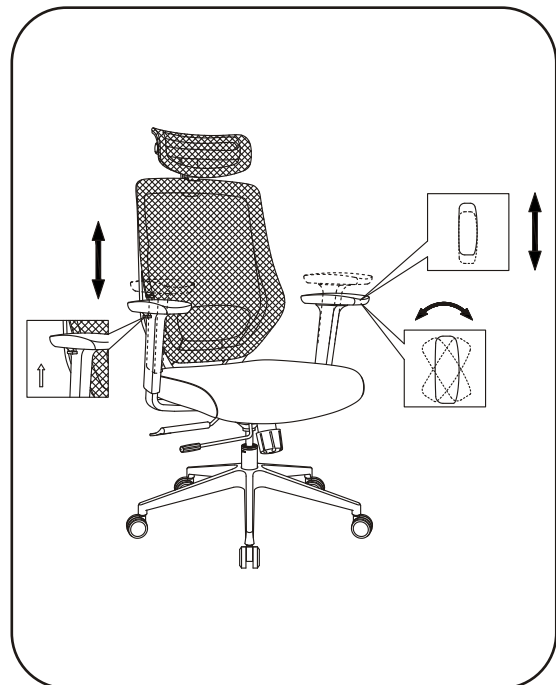

Height adjustable arms, press the button to adjust the arm height.
Sliding arm pads.
Pivoting arm pads.