

# ASSEMBLY INSTRUCTIONS

 


## Office Boffins

A-1 PC




B-1 PC



C-5 PCS



 
D-2 PC



E-1 PC



 F-1 PC



G-1 PC



H-1 PC



I-1 PC

 


J-4 PCS




32mm

J1-2 PCS



22mm

 J2-4 PCS



32mm

K-3 PCS



25mm

L-3 PCS



Ø 16mm

M-3 PCS



Ø 23mm

N-2 PCS



16mm

O1-1 PC

 


4mm


O2-1 PC




5mm

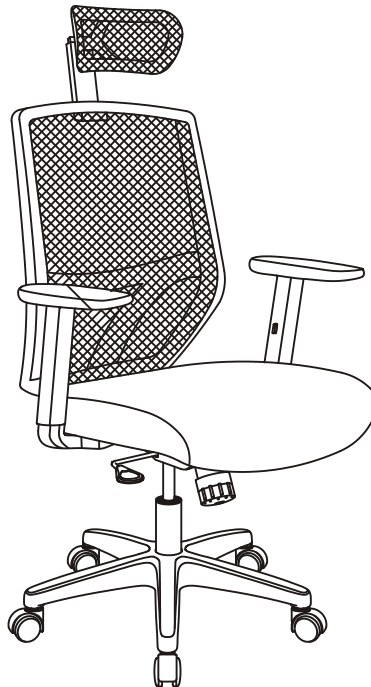

### EVOML001-K

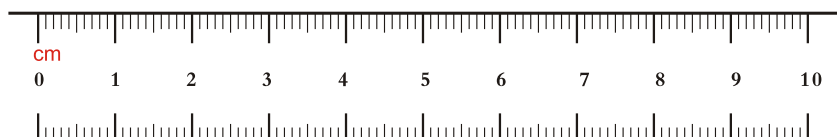 


 **Do not tighten bolts fully until you have completed assembly.  
DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS.  
TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.**

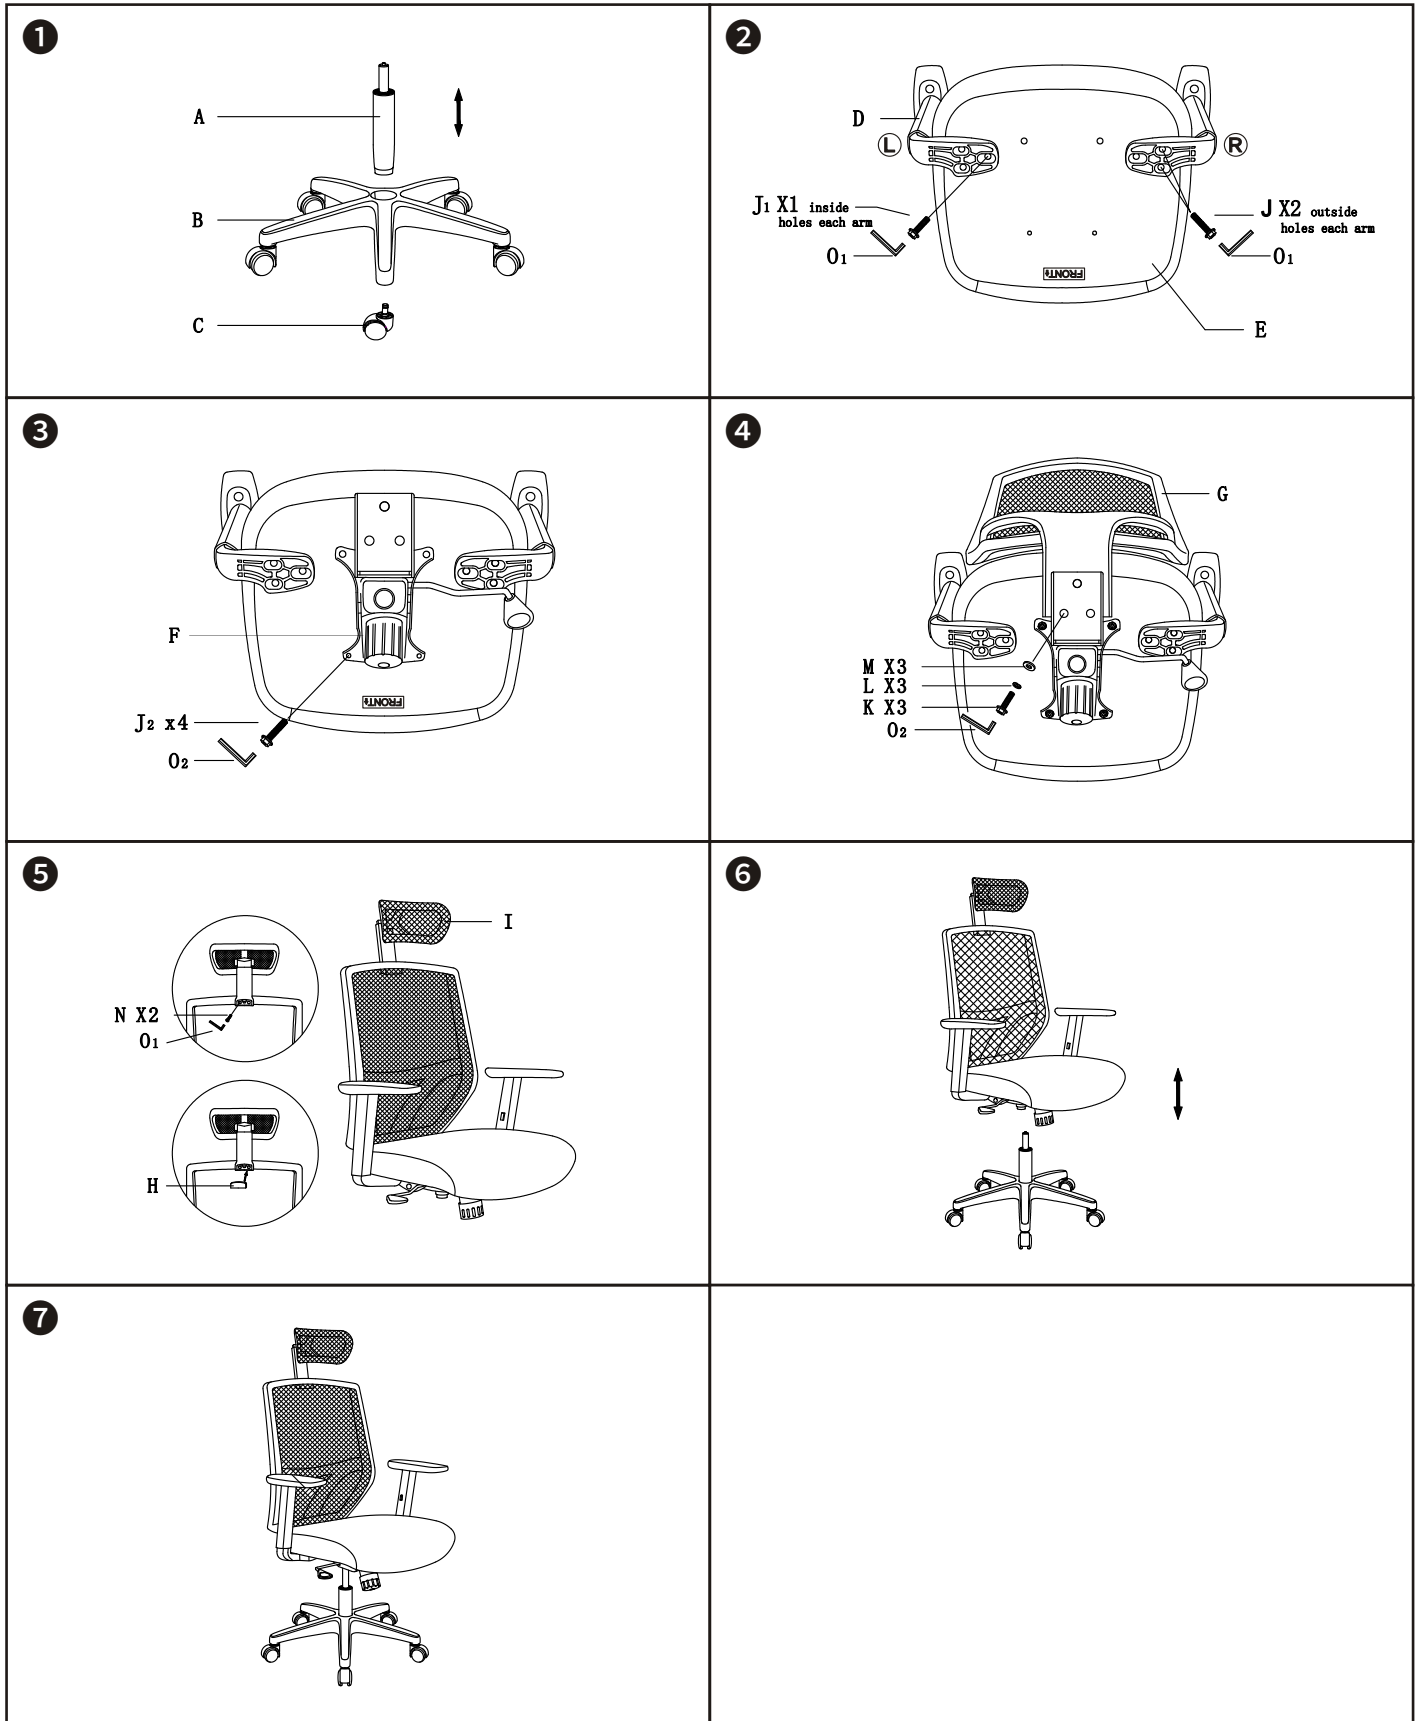


## WARNING

 
- DO NOT STAND ON THIS CHAIR.
- DO NOT USE THIS CHAIR AS A STEP LADDER.
- USE THIS PRODUCT FOR SEATING ONE PERSON AT A TIME ONLY.
- DO NOT USE THIS CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE FIRMLY SECURED.
- AT LEAST EVERY 6 MONTHS, CHECK ALL BOLTS, SCREWS AND KNOBS TO BE SURE THEY ARE TIGHT.
- IF PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USING THIS PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORISED PARTS.
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

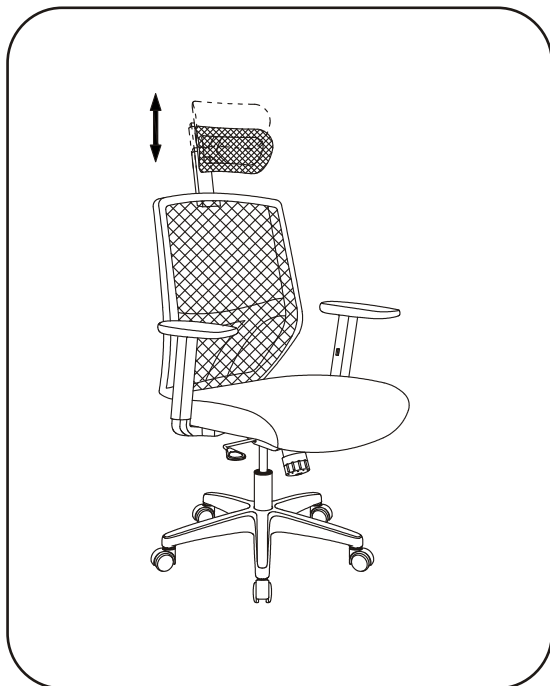


Height Adjustable Headrest.

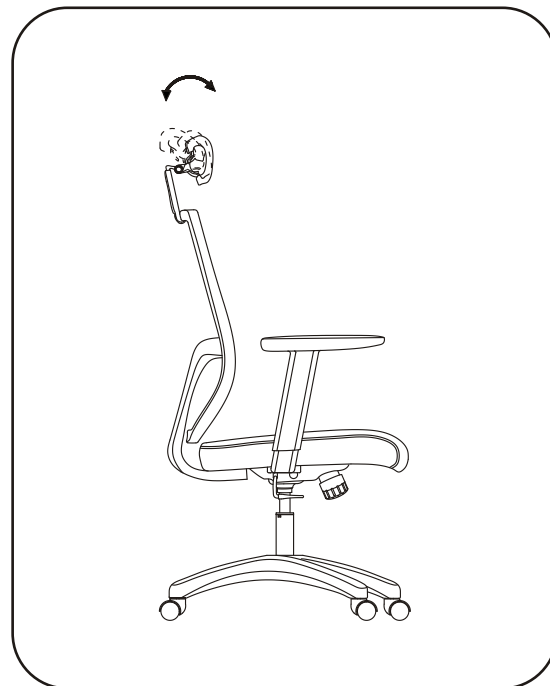 


45° Adjustment.

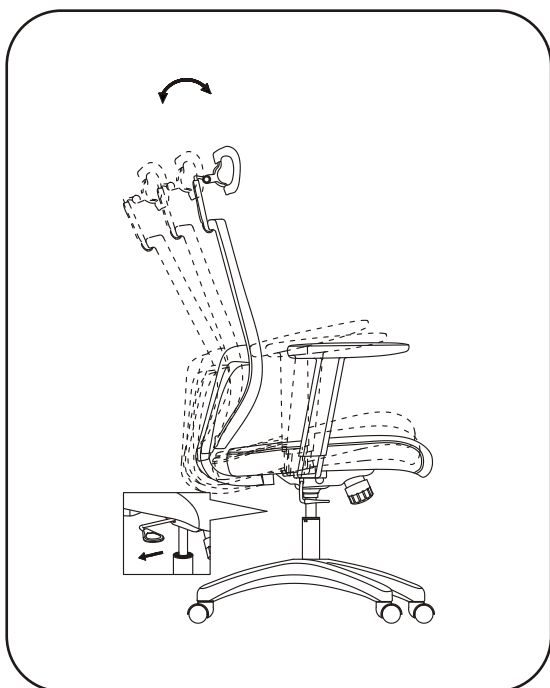 

 
Synchronised Tilt Adjustment, pull the handle out to release the tilt, push the handle in to lock the tilt in upright position.

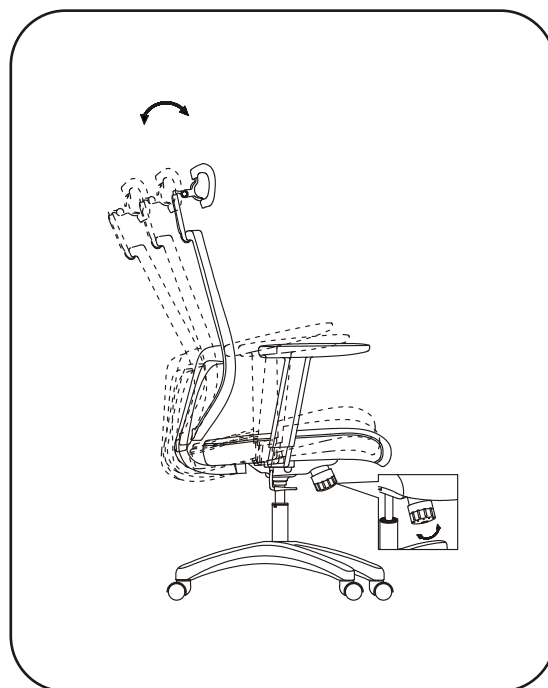

 Weight Tension Adjustment, turn clockwise to increase resistance, anti-clockwise to decrease.

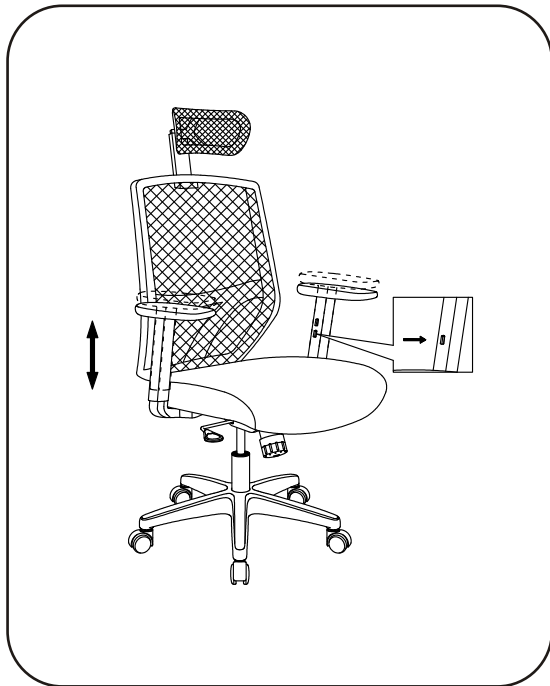

 Height Adjustable Arms, press the button to adjust the arm height.

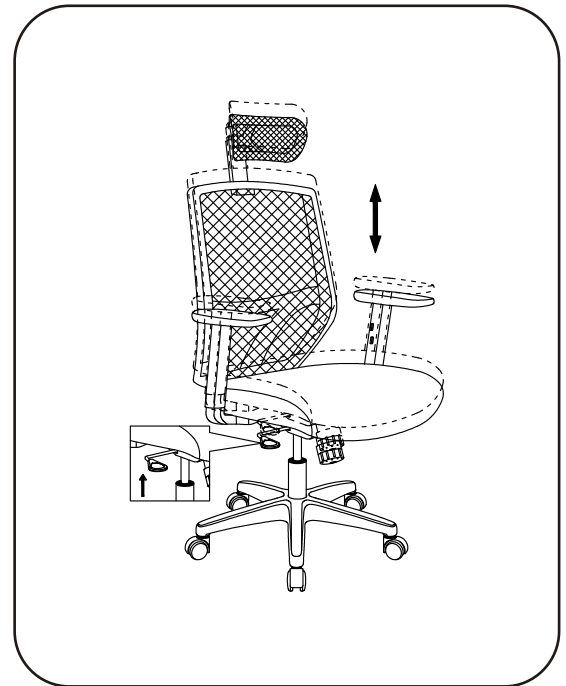

Seat Height Adjustment, lift handle to raise/lower seat height.