

ASSEMBLY INSTRUCTIONS



Office Boffins

A-1 PC



B-1 PC



 
C-5 PCS




D-1 PC



E-2 PCS



F-1 PC

 

G-1 PC



H-6 PCS



32mm

H1-4 PCS



25mm

H2-4 PCS



20mm

I-4 PCS



Ø16mm

J-4 PCS



Ø23mm

K-1 PC



4mm


K1-1 PC




5mm



CONNM001-K

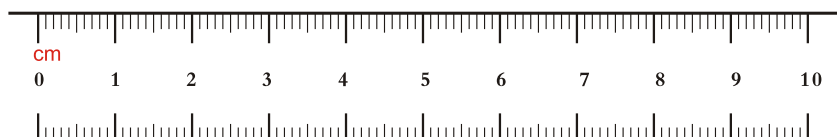


**Do not tighten bolts fully until you have completed assembly.
DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS.
TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.**

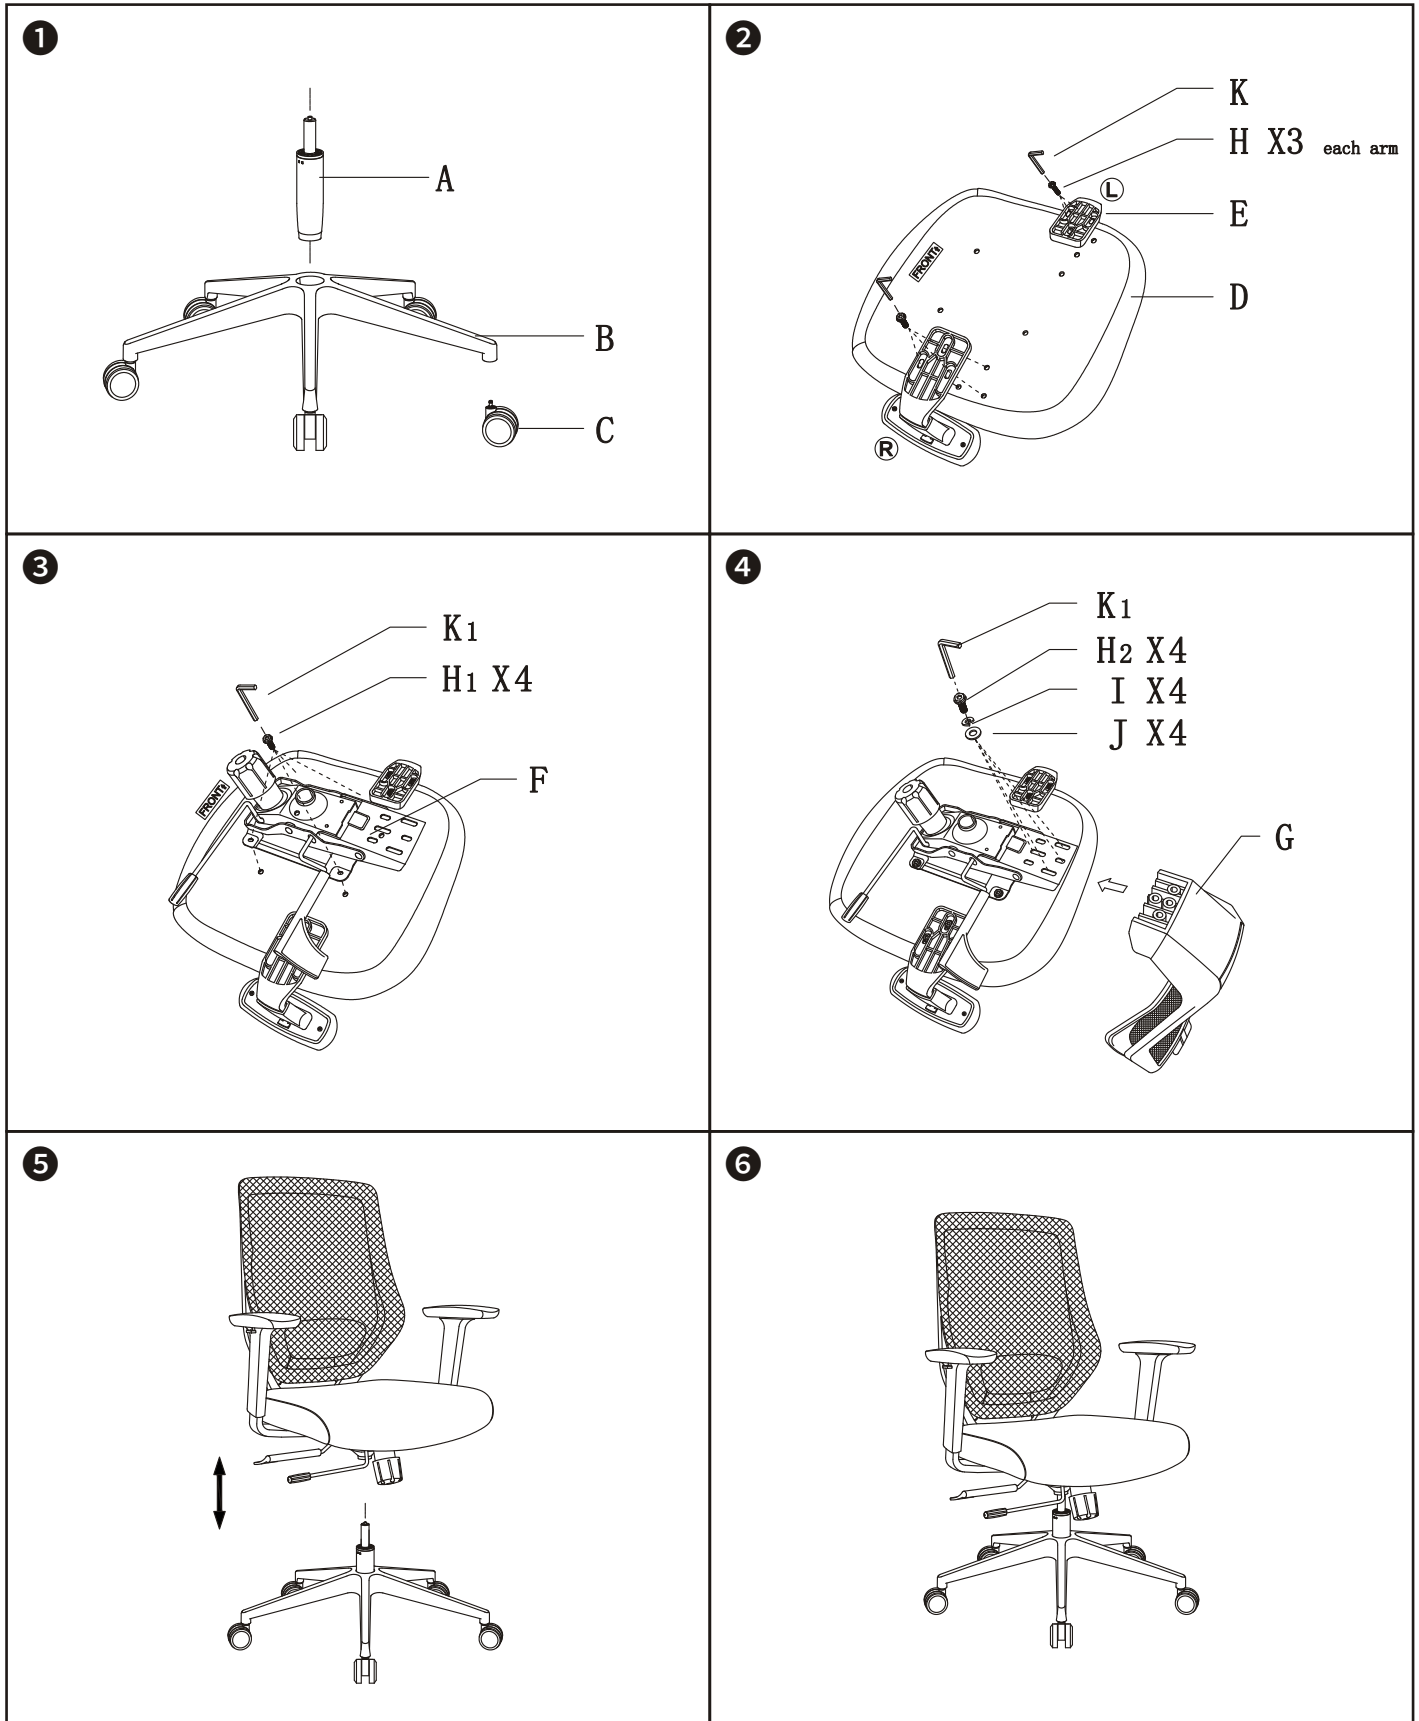


WARNING


- DO NOT STAND ON THIS CHAIR.
- DO NOT USE THIS CHAIR AS A STEP LADDER.
- USE THIS PRODUCT FOR SEATING ONE PERSON AT A TIME ONLY.
- DO NOT USE THIS CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE FIRMLY SECURED.
- AT LEAST EVERY 6 MONTHS, CHECK ALL BOLTS, SCREWS AND KNOBS TO BE SURE THEY ARE TIGHT.
- IF PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USING THIS PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORISED PARTS.
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

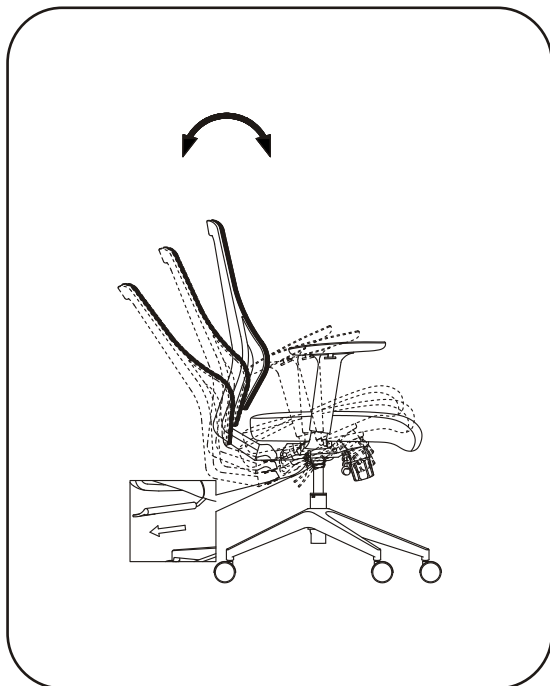


Synchronised Tilt Adjustment, pull the handle out to release the tilt, push the handle in to lock in 3 positions.

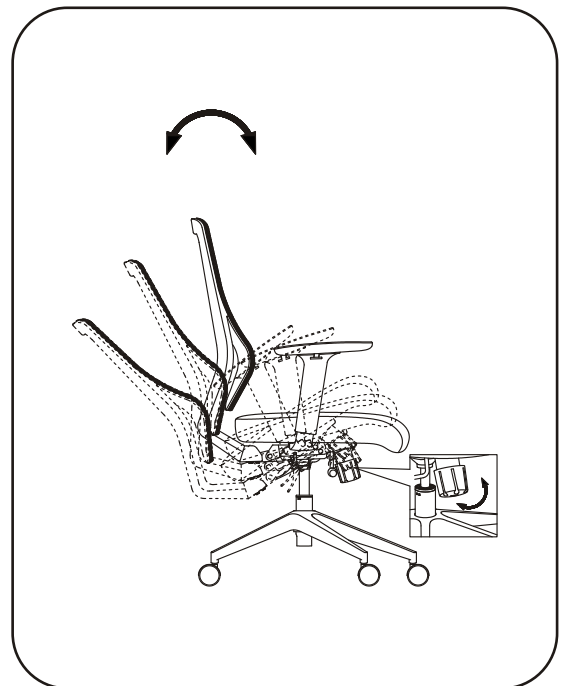

Weight Tension Adjustment, turn clockwise to increase resistance, anti-clockwise to decrease.

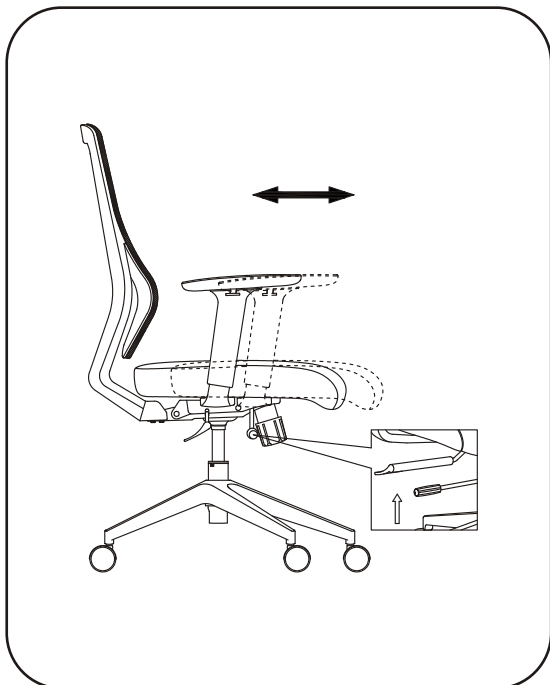


Seat Depth Adjustment, lift handle up to adjust seat depth.

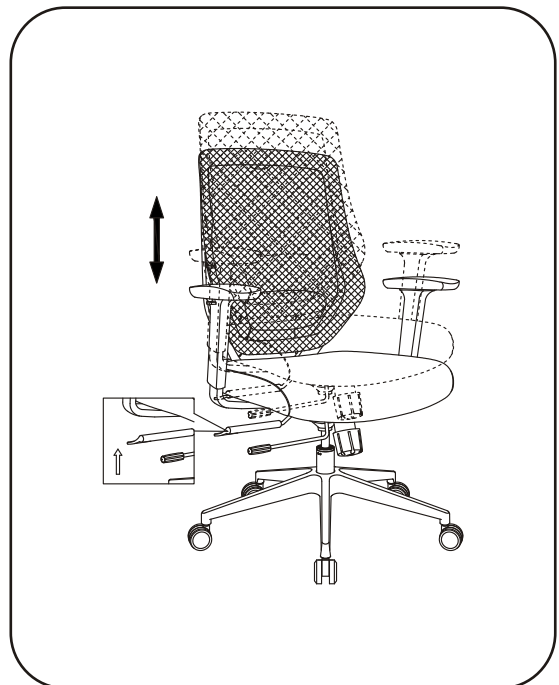

Seat Height Adjustment, lift handle to raise/lower seat height.



Lumbar Support Adjustment.

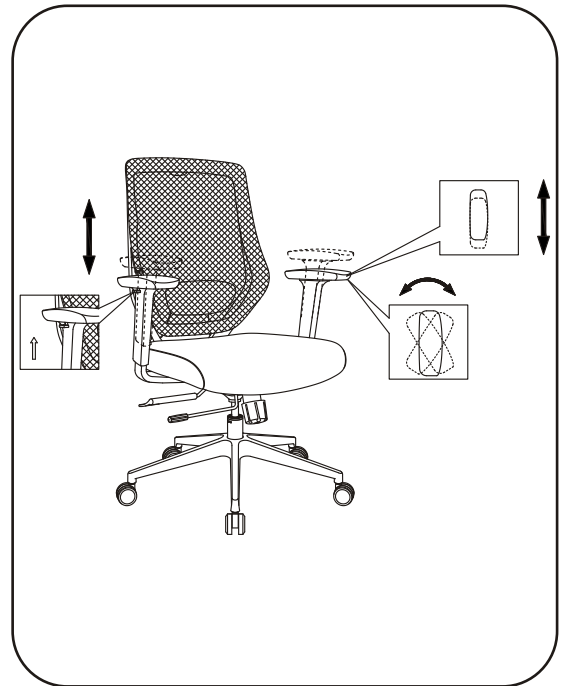

Height adjustable arms, press the button to adjust the arm height.

Sliding arm pads.

Pivoting arm pads.