

ASSEMBLY INSTRUCTIONS



 
Office Boffins



A-1 PC




B-1 PC




C-5 PCS



 
D-1 PC



E-2 PCS

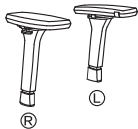

F-4 PCS

 


20mm

F1-4 PCS



10mm

 G-3 PCS



20mm

H-3 PCS



 
Φ16mm

I-3 PCS



Φ23mm


J-1 PC



1 PC




EVEF001-K

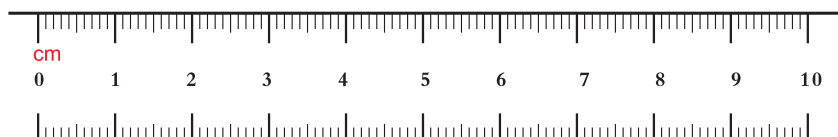


**Do not tighten bolts fully until you have completed assembly.
DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS.
TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.**


- 1** Press the 5 castors (C) firmly into the base (B). Insert the gas lift (A) into the centre of the base.

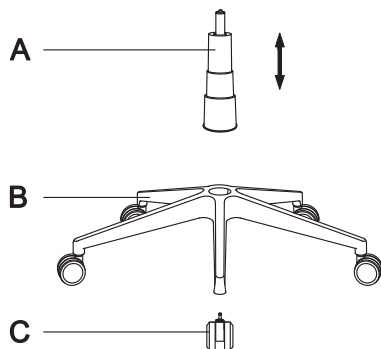


- 2** Fit the backrest (J) to the seat mechanism. Secure with 3 × G bolts, each fitted with an H and I washer. Do not fully tighten until the backrest is aligned.

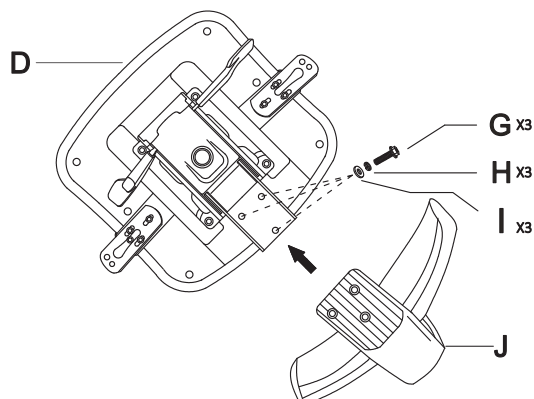

- 3** Fit the two armrests (E) to the underside of the seat (D). Secure each armrest with 2 × F bolts, each fitted with an F1 washer.

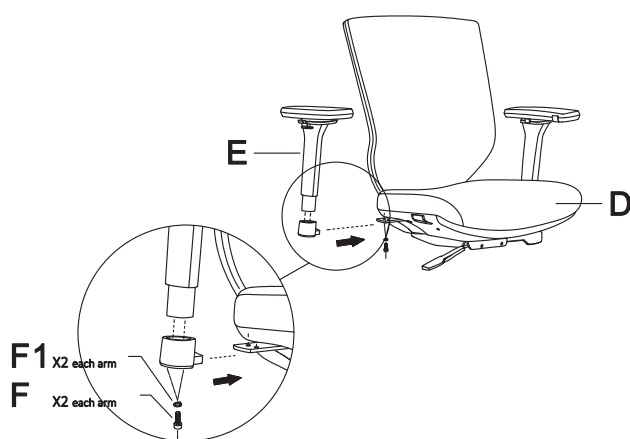

- 4** Lower the assembled seat onto the gas lift. Your body weight locks it in place — no screws are required here.

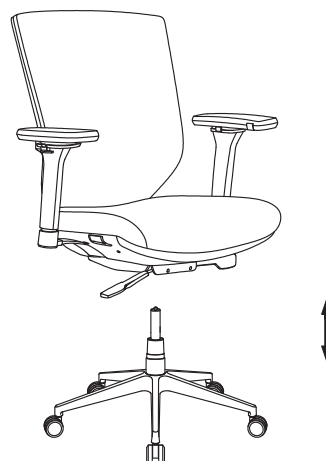

5



WARNING


- DO NOT STAND ON THIS CHAIR.
- DO NOT USE THIS CHAIR AS A STEP LADDER.
- USE THIS PRODUCT FOR SEATING ONE PERSON AT A TIME ONLY.
- DO NOT USE THIS CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE FIRMLY SECURED.
- AT LEAST EVERY 6 MONTHS, CHECK ALL BOLTS, SCREWS AND KNOBS TO BE SURE THEY ARE TIGHT.
- IF PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USING THIS PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORISED PARTS.
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.




Height Adjustable Armrest, Sliding Armpad Adjustment




Armpad Angle Adjustment

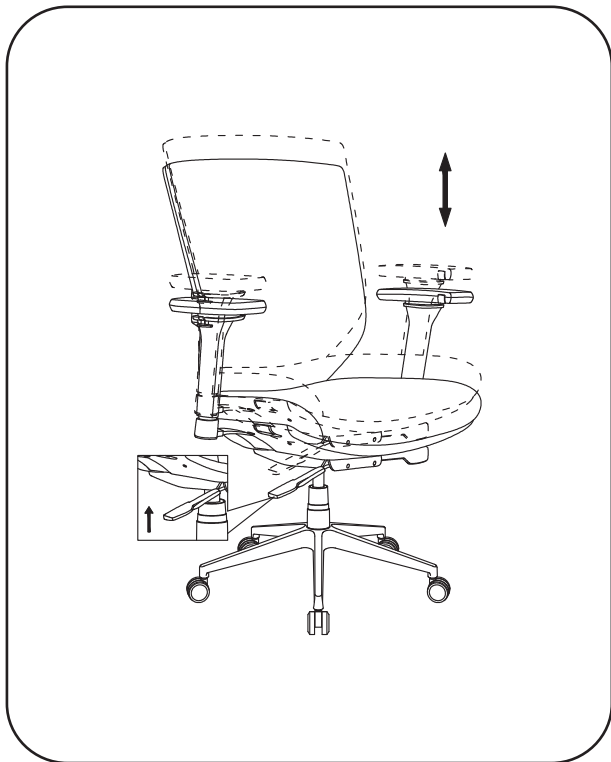


Seat Height Adjustment

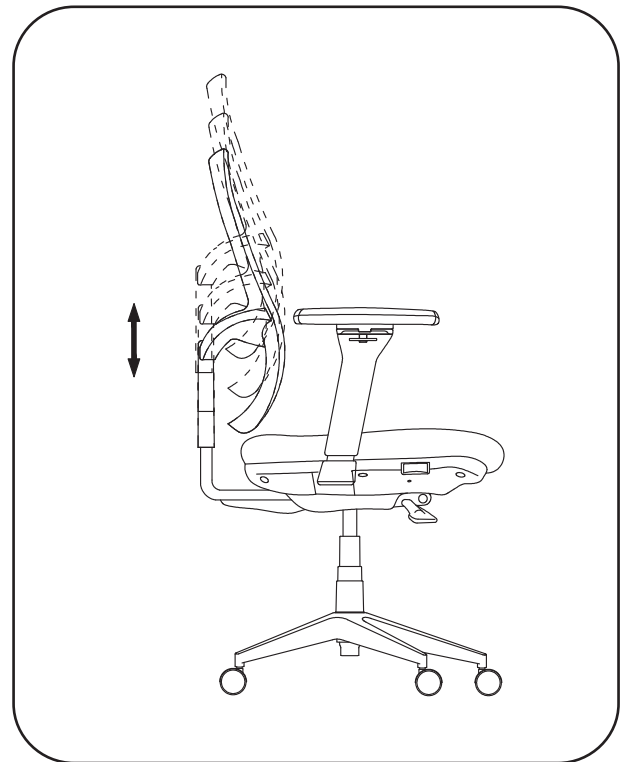

Back Height Adjustment

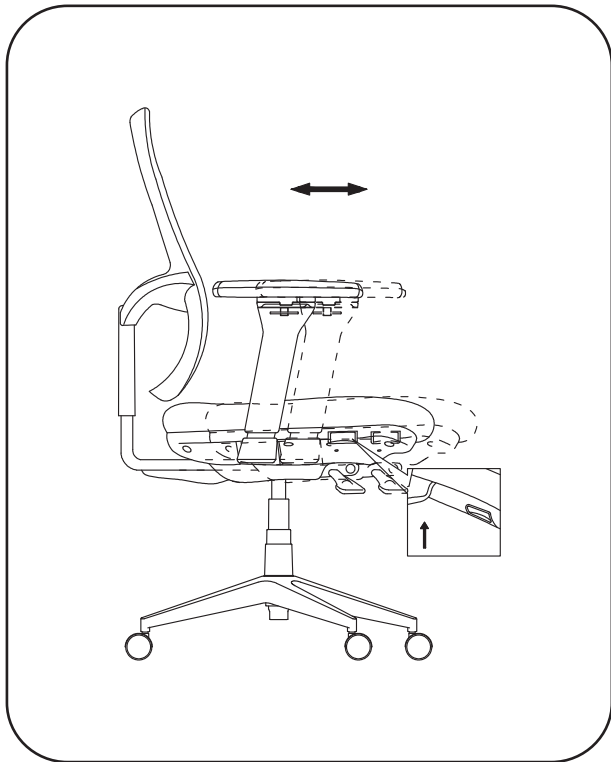

Seat Depth Adjustment

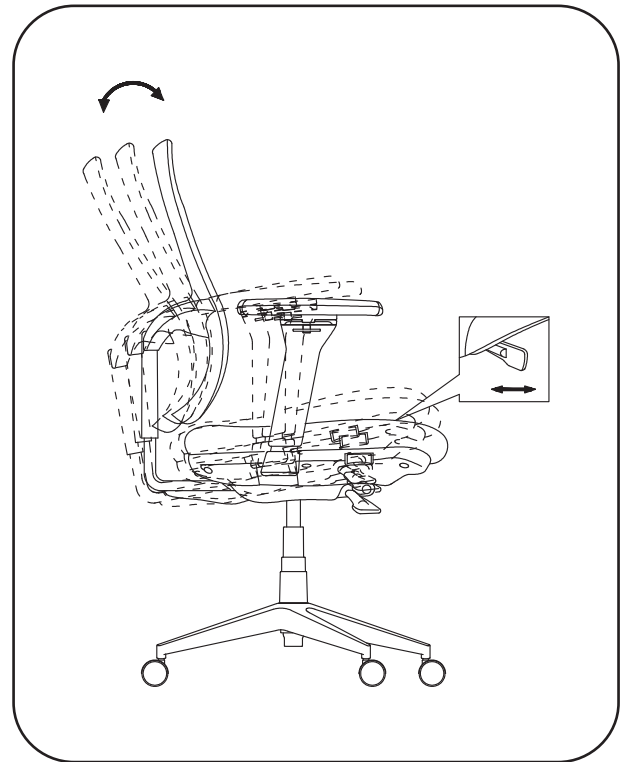

Synchronised Tilt Adjustment