


ASSEMBLY INSTRUCTIONS



Office Boffins


A-1 PC




B-5 PCS




C-4 PCS
20mm




D-1 PC



E-4 PCS
25mm




F-6 PCS
30mm



G-1 PC



SAVM001

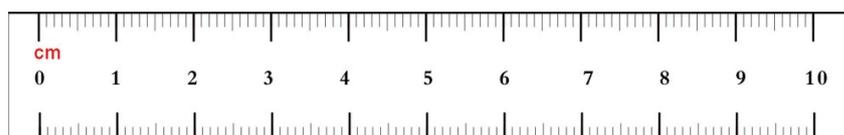

**Do not tighten bolts fully until you have completed assembly.
DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS.
TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.**

