

ASSEMBLY INSTRUCTIONS




Office Boffins



PEXECL001 PEXECF001

A-1PC

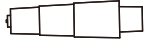

B-5PCS




C-4PCS
(22mm)



PRE-INSERTED

D-4PCS
(45mm)

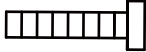

E-4PCS
(30mm)



PRE-INSERTED

F-4PCS




G-2PCS





PLEASE NOTE:

The screws "C" and "E" are pre-inserted into their correct holes to prevent them from being lost in transit. Please remove them before assembly using the allen key provided.

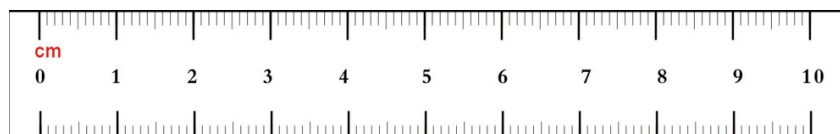


**Do not tighten bolts fully until you have completed assembly.
DO NOT USE A POWER DRILL TO TIGHTEN THE SCREWS.
TIGHTEN BY HAND WITH THE ALLEN KEY PROVIDED.**

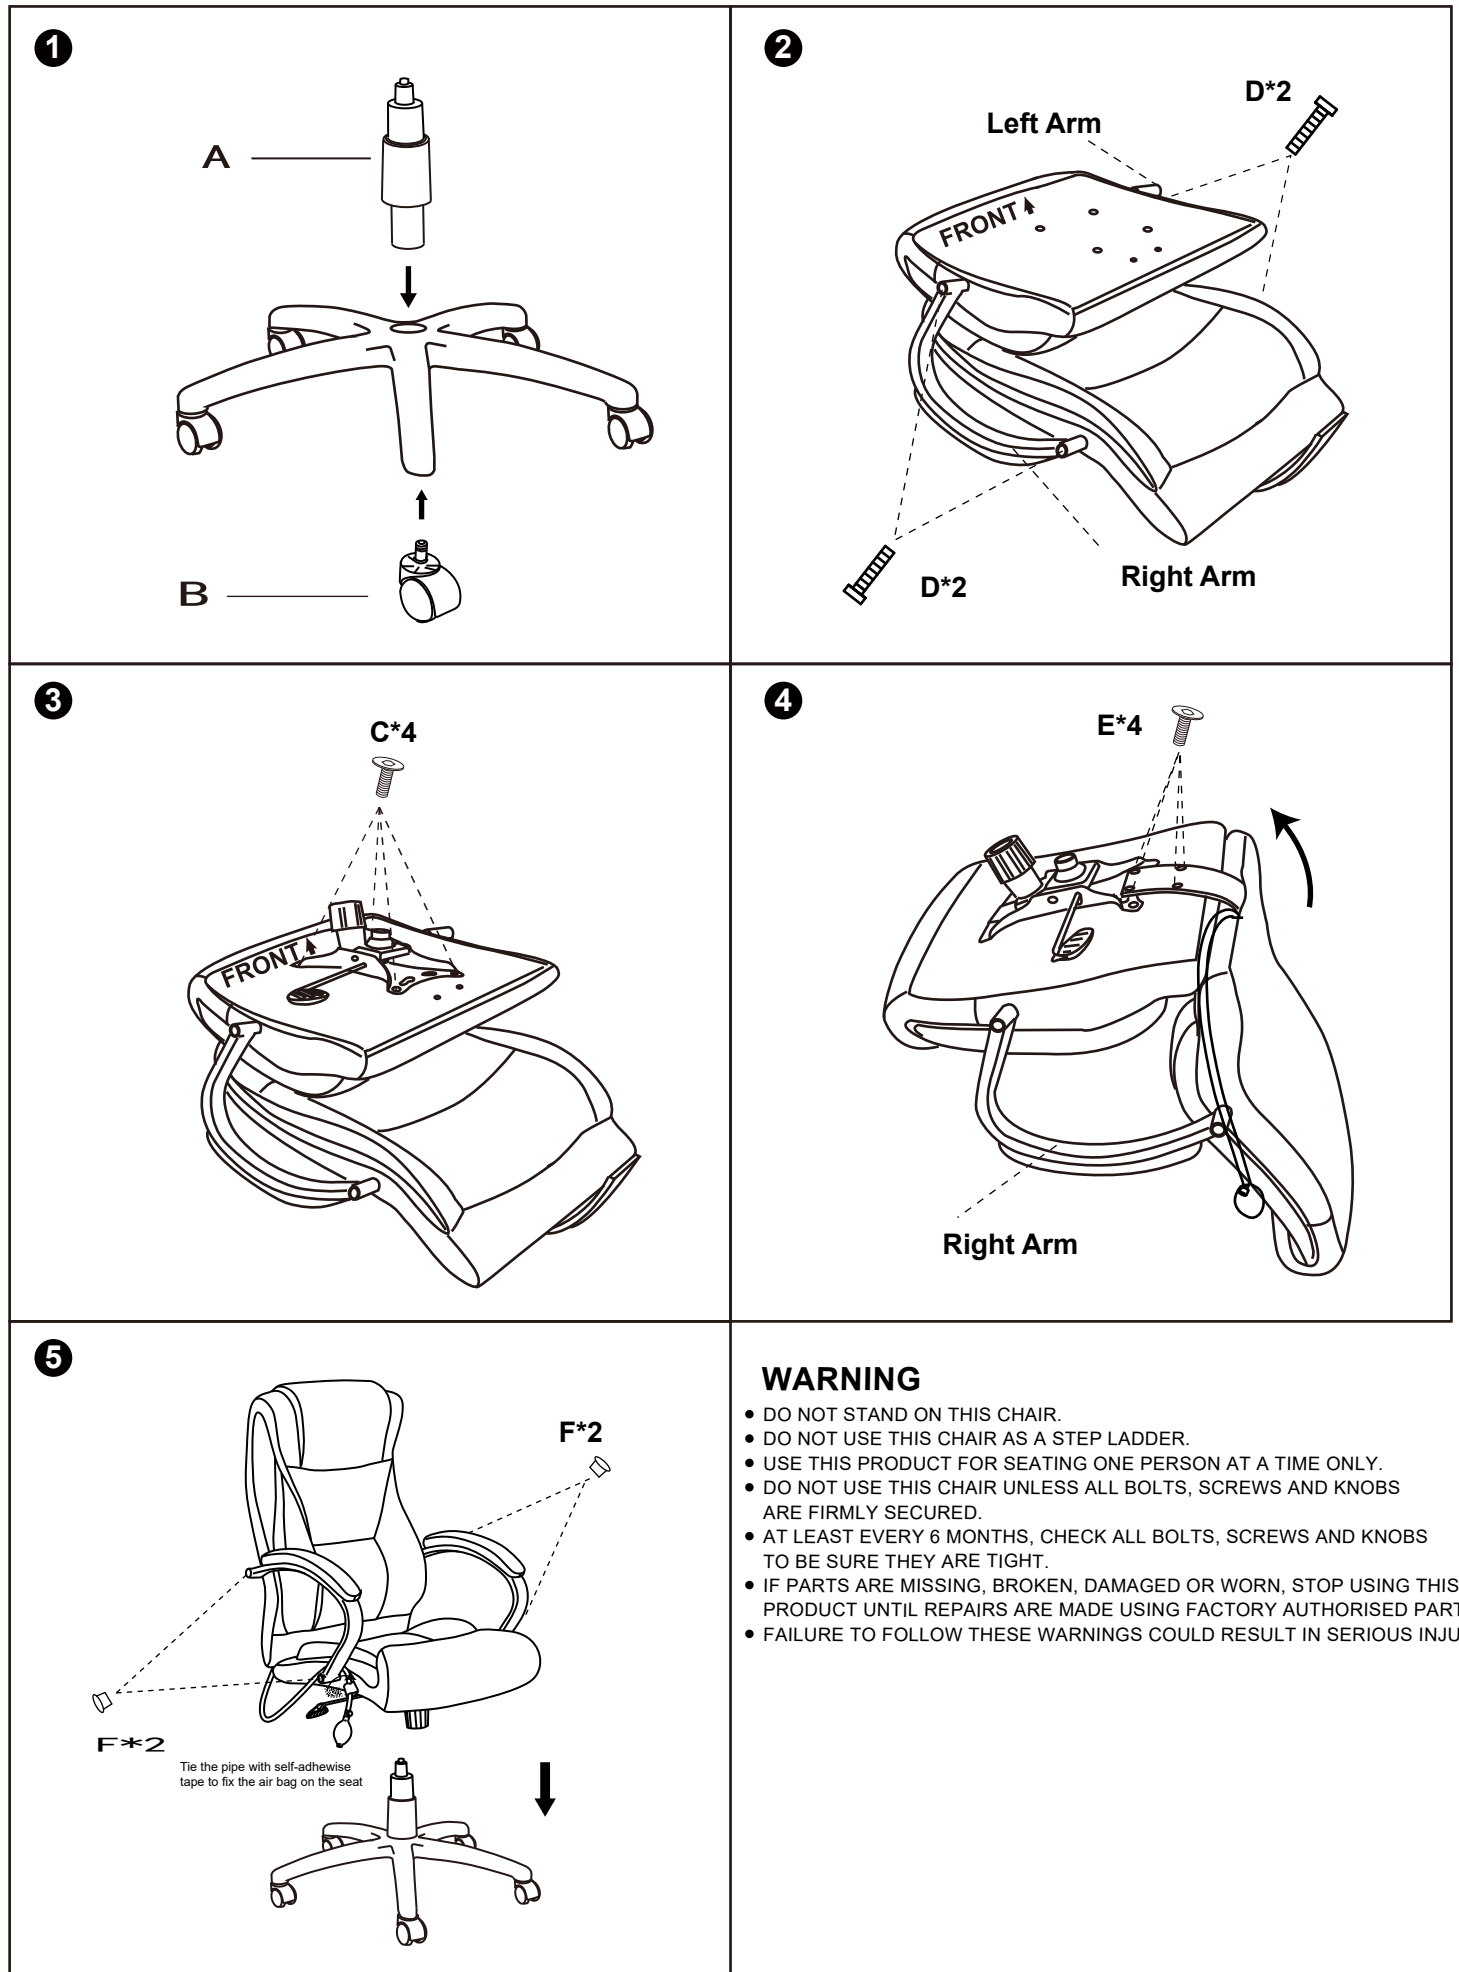


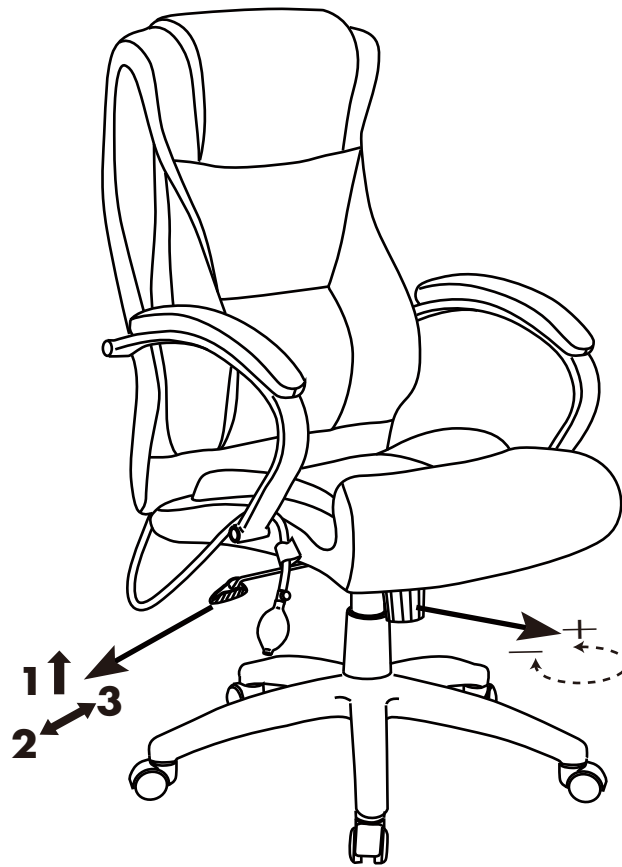

1

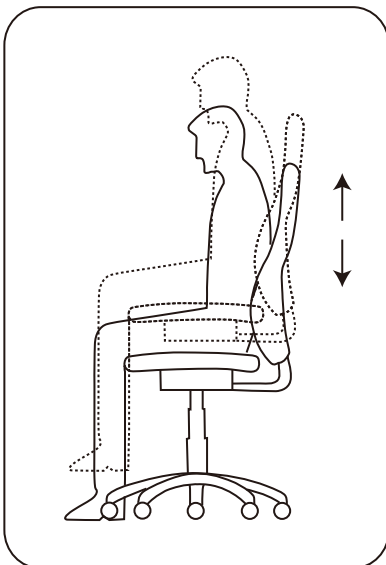

2

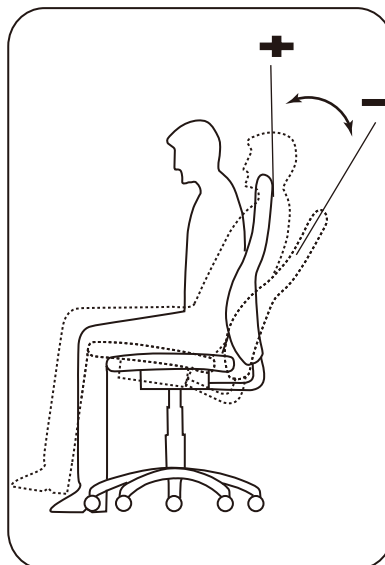

3

