


ASSEMBLY INSTRUCTIONS



**Office
Boffins**



**2 PERSON
ASSEMBLY**

A-4 PCS



M5 x30mm

B-4 PCS



Wing Nut

C-12 PCS



Shelf Clip

D-2 PCS



Keys

E-4 PCS



Nylon Bush(oval)

F-4 PCS



Nylon Bush(round)

G-3 PCS




M4 x12mm

O-4 PCS



Hinge

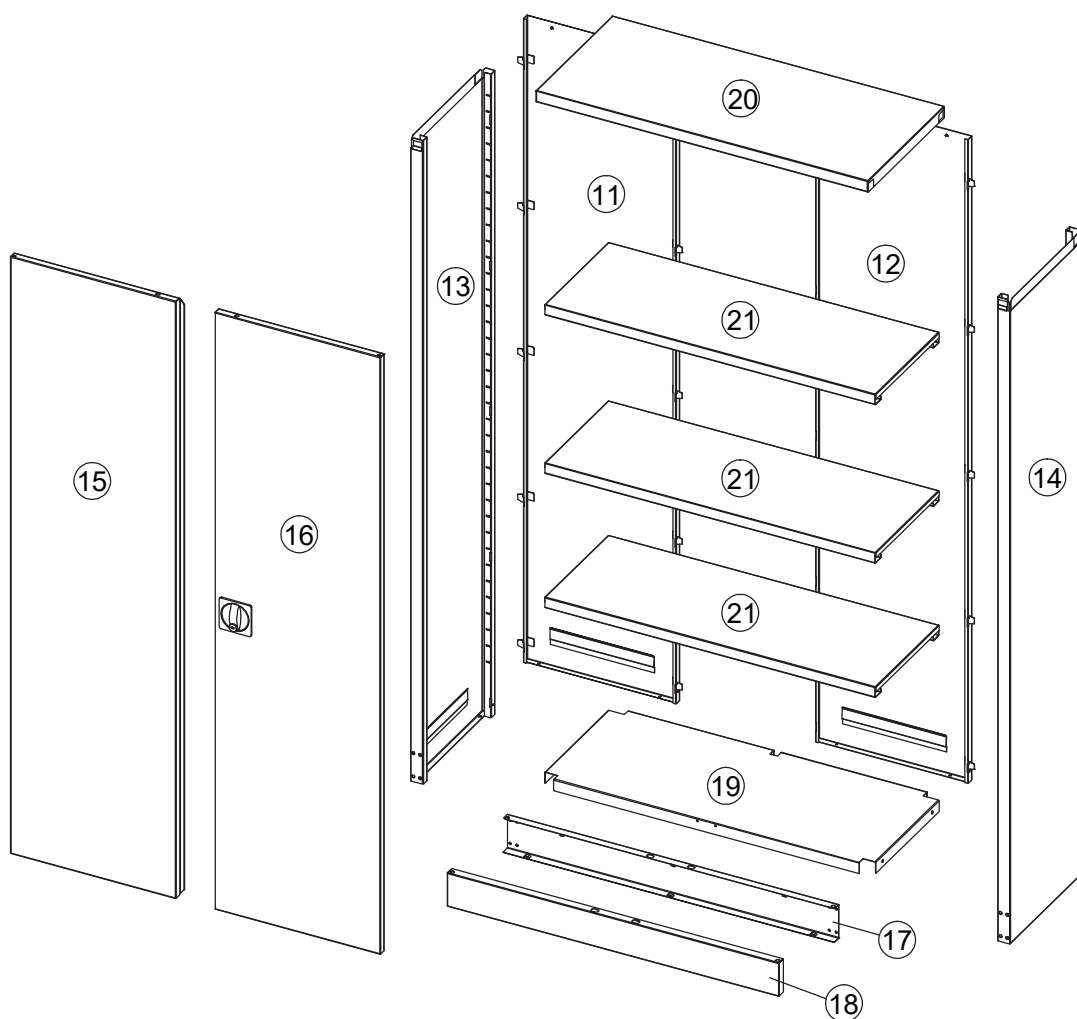


HMCUP3 Horizon Metal Office Cupboards 3 Shelf


Additional tools required:
1 x cross-head screwdriver.
The fittings are packed between parts 17 & 18
which are wrapped together.
Part 19 is packed into part 20.

TIGHTEN BY HAND WITH A CROSS-HEAD SCREWDRIVER


- 1** Assemble the 2 back panels by slotting one into the other.

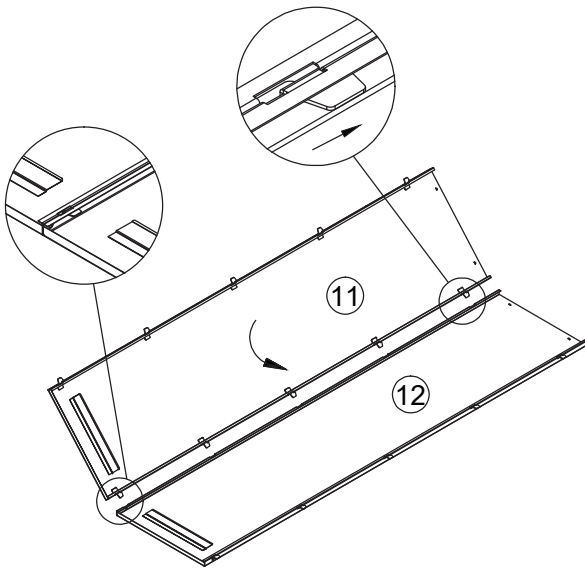


- 2** Attach the 2 side panels by slotting into the back. Using the 3 × G screws, screw the back panels to the side panels.

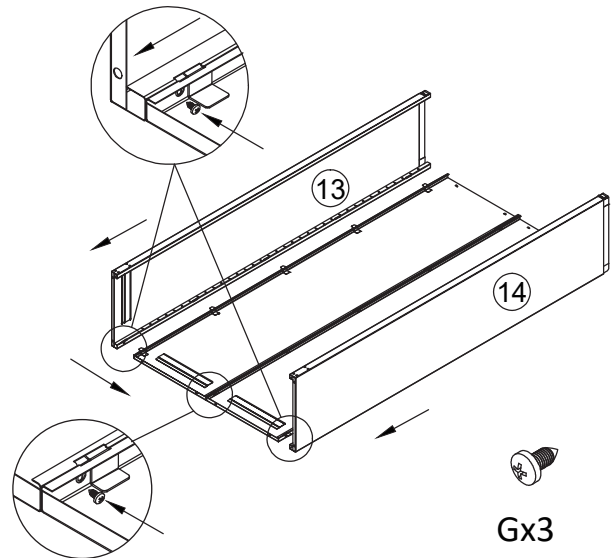

- 3** Fix part 17 in place using bolts "A" and wing nuts "B". Fit in the correct direction — see ✓ (correct) and ✗ (wrong).

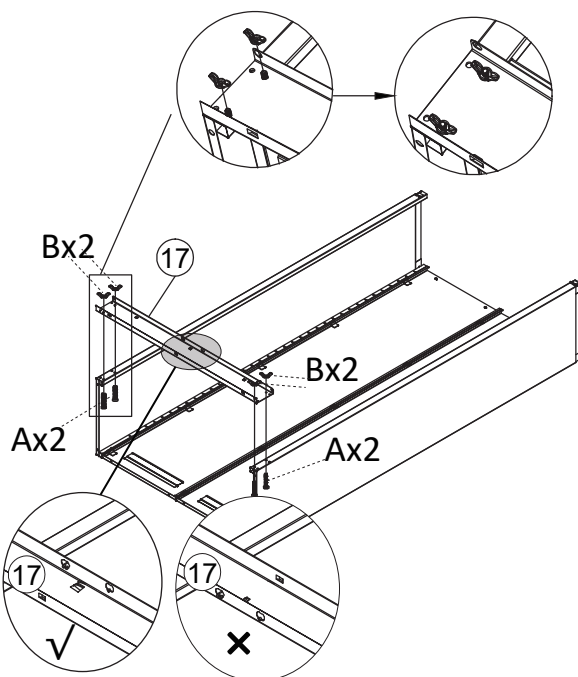


- 4** Put the bottom shelf in and slide into place.

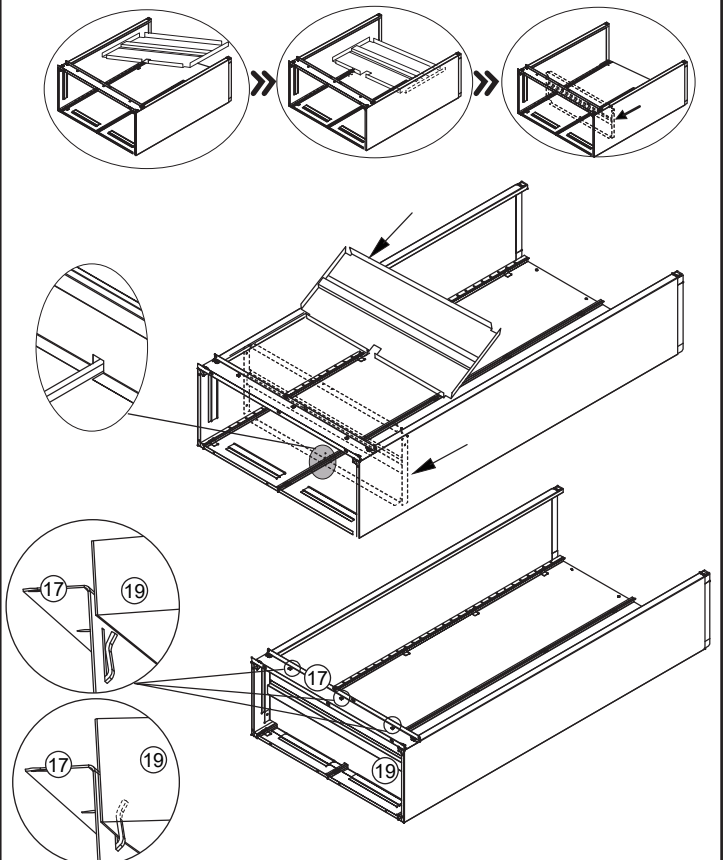


TIGHTEN BY HAND WITH A CROSS-HEAD SCREWDRIVER


- 5** Attach the front panel.

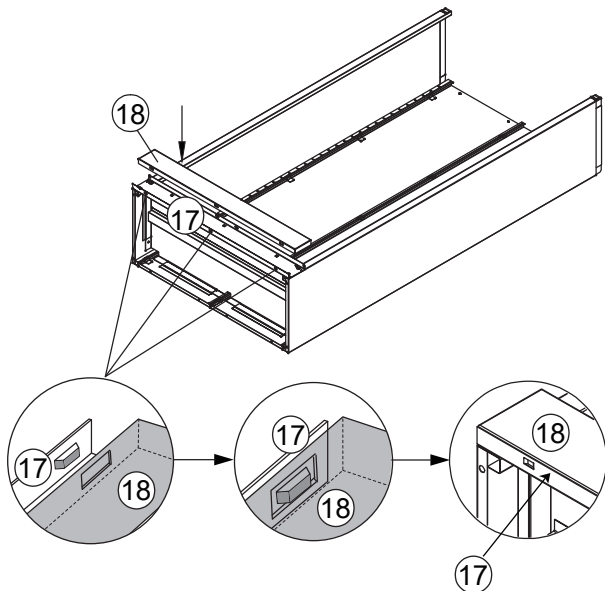


- 6** Attach the top to the frame. Ensure the sides and back fit into the grooved edges of the top and then press down the top and it will lock into the back.

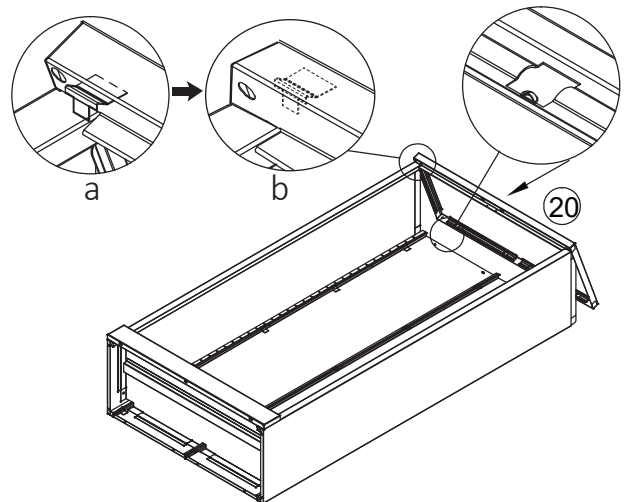

- 7** Insert the nylon bushes E x 4 into the top and base.

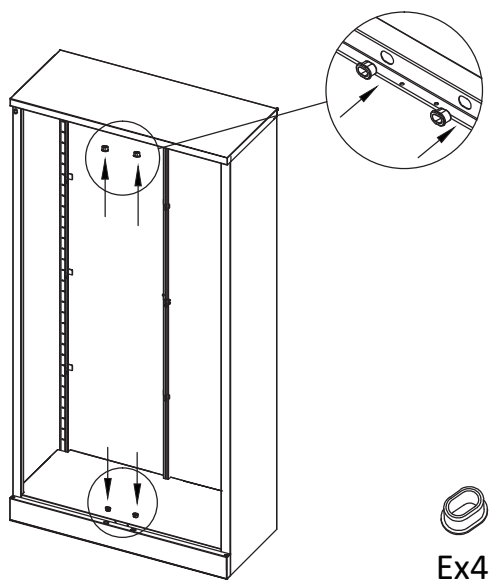


- 8** Insert the nylon bush "F" into the top and the bottom panels. Push hinge "O" through the bottom of the left-hand door into the nylon bush "F" - image 1. Lock the hinge into position - image 2. Repeat this process for the top of the left-hand door - image 3 & 4. Do the same to fit the right-hand door.

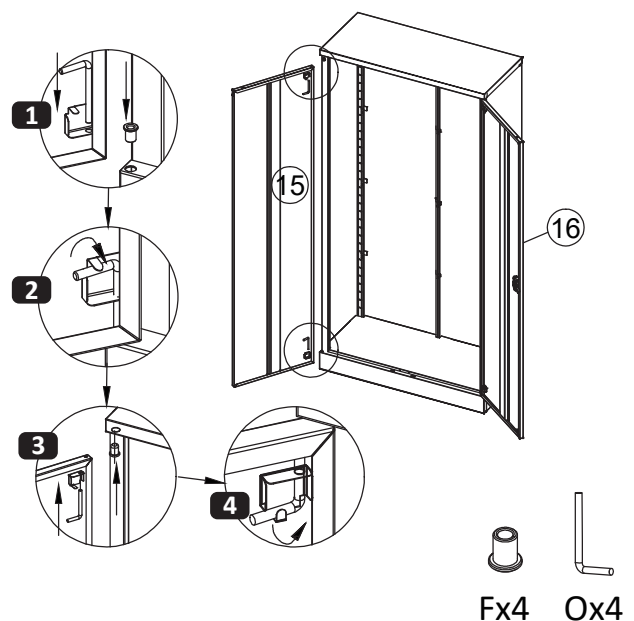


TIGHTEN BY HAND WITH A CROSS-HEAD SCREWDRIVER

9 Insert the shelf clips “C” into the required shelf positions.

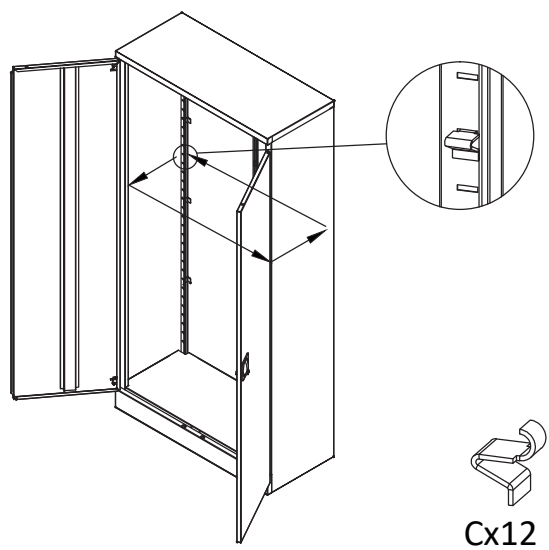

10 Fit the three shelves.

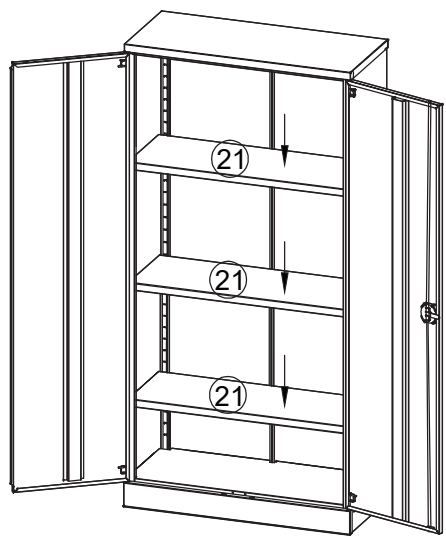

11

